

Ultrathin Touch Slide RF Remote Controller

- Apply to single color, dual color ,RGB, RGB+W or RGB+CCT LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.
- White & Black available.




CE RoHS  LVD RED

Technical Parameters

| Input and Output | | Safety and EMC | | Package | |
|------------------|-------------------------|----------------------|---------------------------|-----------------------|---------------------|
| Output signal | RF(2.4GHz) | EMC standard (EMC) | ETSI EN 301 489-1 V2.2.3 | Size | L156 x W48 x H22mm |
| Working voltage | 3VDC(CR2032) | | ETSI EN 301 489-17 V3.2.4 | Gross weight | 0.075kg |
| Working current | <5mA | Safety standard(LVD) | EN 62368-1:2020+A11:2020 | Environment | |
| Standby current | <10µA | Radio Equipment(RED) | ETSI EN 300 328 V2.2.2 | Operation temperature | Ta: -30 °C ~ +55 °C |
| Standby time | 1 year | Certification | CE,EMC,LVD,RED | Warranty | |
| Remote distance | 30m(Barrier-free space) | | | Warranty | 5 years |

Mechanical Structures and Installations

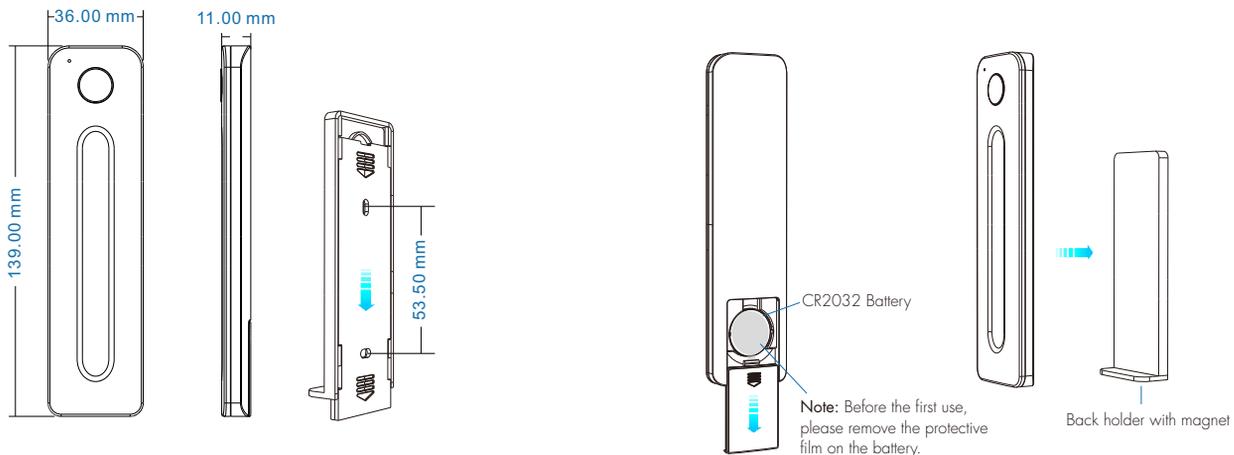

To fix the remote, three options are offered for selection:

- Option 1. can be adsorbed directly onto metal surfaces.
- Option 2. fix the remote' back holder on the wall with two screws.
- Option 3. adhere the remote' back holder to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key, immediately press on/off key on the remote.
The LED indicator fast flash a few times means match is successful.


Delete:
Press and hold match key for 5s to delete all match,
The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


Match:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key 3 times on the remote.
The light blinks 3 times means match is successful.

Delete:
Switch off the power, then switch on power, repeat again.
Immediately short press on/off key 5 times on the remote.
The light blinks 5 times means all matched remotes were deleted.


● R11 1 zone dimming remote

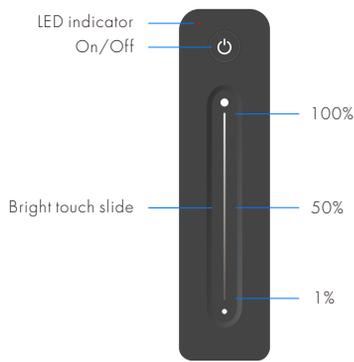


● R12 1 zone CCT remote

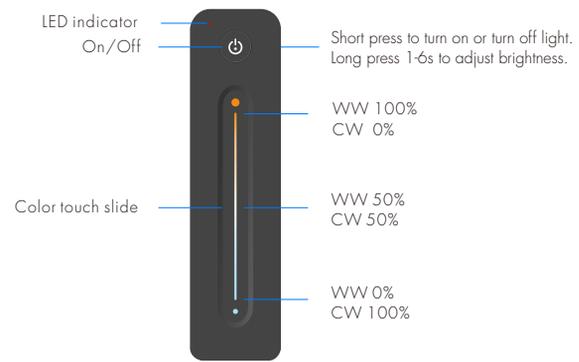

● R13 1 zone RGB remote

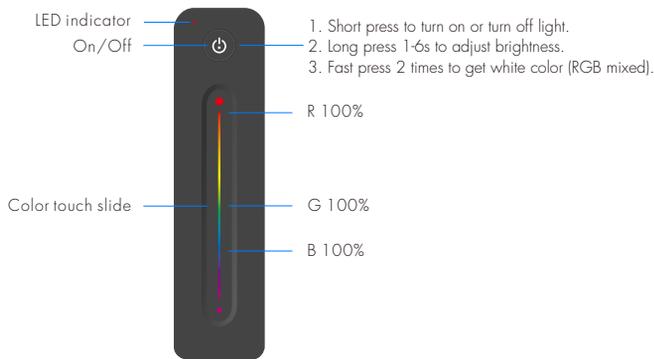

● R14 1 zone RGBW remote

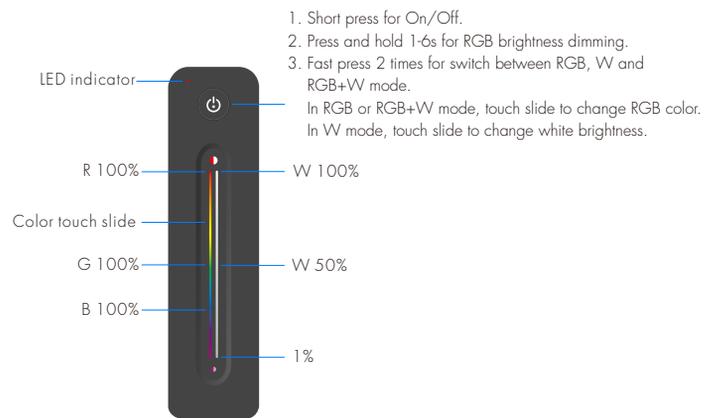

● R10 1 zone RGB+CCT



Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.