6-Key RF Remote Controller

Model No.: RM1, RM2, RM3

Wireless remote 30m distance / CR2032 battery

Features

- Apply to single color, dual color or RGB/RGBW LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.



1 Zone Dimming



RM2 1 Zone CCT



RM3 1 Zone RGB/RGBW

C€ RoHS emc RED

 
Technical Parameters

 
Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	<5µA
Standby time	2 years
Remote distance	30m(Barrier-free space)

 
Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard	EN 62368-1:2020+A11:2020
Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,RED
Warranty	5 years


Environment	
Operation temperature	Ta:-30°C ~ +55°C
IP rating	IP20
Packing	
Size of the box	L104 x M50 x H12mm
Gross weight	0.040kg

Dmension







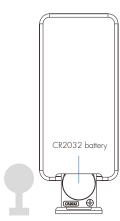

Note: Before the first use,

please remove the protective film on the battery.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. There are two options offered for selection:

Use the controller's Match key

Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function

RM1 1 zone dimming remote



- (b) On/Off
 - Turn off light after 30s, long press 2s will turn off light after 60s.
- 50% brightness
- 10% brightness for small night light
- ★ Brightness+
- Brightness-

Brightness+/-:

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

• RM2 1 zone CCT remote



- (b) On/Off
- (b) Turn off light after 30s, long press 2s will turn off light after 60s.
- Color temperature +
- Color temperature -
- ★ Brightness+
- * Brightness-

Color temperature+/-:

Short press 11 levels, long press 1-6s for continuous 256 levels adjustment.

 
Briahtness+/-

Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

• RM3 1 zone RGB/RGBW remote



- On/Off: Turn on/off light.
- Color: Short press get 24 kinds static RGB color, long press for continuous static color adjustment.



- Mode+: Short press run the next dynamic mode, long press 2s run mode cycle.
- (O) Mode -: Short press run the previous dynamic mode, long press 2s run the first mode.
- Bright/Speed+: For static RGB color, increase brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

 For dynamic mode, increase speed, short press 10 levels, long press get the fastest speed.
- Bright/Speed -: For static RGB color, deccrease brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

For dynamic mode, decrease speed, short press 10 levels, long press get the slowest speed.

- R/G/B: Short press get red green or blue color directly, long press 1-6s adjust R/G/B brightness continuouslyto achieve millions of colors.
- W+/-: For RGB light, short press turn on/off white(RGB mix), long press 1-6s adjust saturation continuously namely change current static RGB color to mixed white slowly. For RGBW light, short press turn on/off W channel, long press 1-6s adjust W brightness continuously.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

Jser Manual Ver 2.0.1