

Hair Dryer User Manual

INTRODUCTION


Thank you very much for purchasing our appliance. Please take a few moments to carefully read through this manual before you use the product. Handle this appliance with gentle care will assure long lasting life cycle; improper handling may cause malfunction or other problems in the product causing damage to the unit. Please keep this instruction manual in a safe place for future reference.

TECHNICAL PARAMETERS

Rated Voltage	AC220-240V
Frequency	50/60Hz
Category	□
Airflow Temp.	≤ 90°C
Themo Protection	Thermal control (resetable), Thermal Fuse

PRODUCT COMPONENTS DIAGRAM

- ① Airflow Inlet
- ② Nozzel
- ③ Cool-Switch
- ④ Cool/ HI /LOW Button
- ⑤ Handle

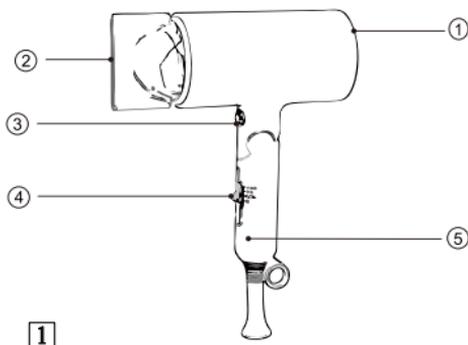

IMPORTANT

WARNING: • Do not use this appliance near water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Always unplug the appliance after use.
- Never use any accessories or parts from other manufacturers or that we does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- If the main cord is damaged, you must have it replaced by us, a service centre authorised by us or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

DRY YOUR HAIR

1. Connect the plug to a power supply socket.
2. Adjust the temperature switch④ to || for cool hot and strong airflow for fast drying; | for warm and gentle airflow for drying short hair or styling hair, ❄ for cool airflow.
3. Press the micro-switch③ to cool on when the temperature switch④ at | or ||.
4. Switch on the ion switch, the hair dryer generates ions to make your hair softer. The ion indicator turns on while ion switch is on.

After use:

1. Release the micro-switch to shut off the appliance and unplug it.
2. Place it on a heat-resistant surface until it cools down.
3. Clean the appliance by damp cloth.
4. Keep it in a safe and dry place, free of dust.

