


CYLINDER ASSEMBLY

A9

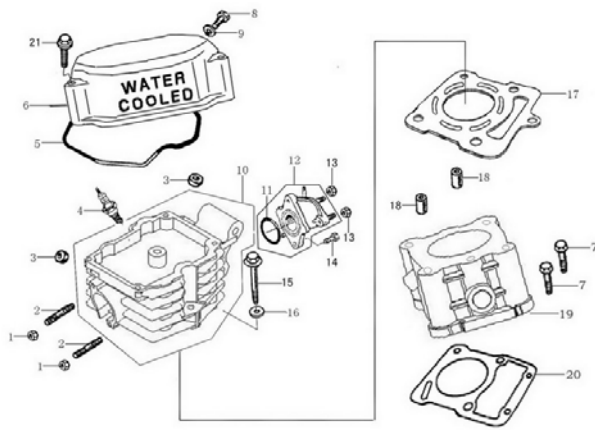


RefNo.		Chinese Description	English Description	Q'ty	
1	B06170000800009	GB6177 螺母 M8	NUT M8	2	
2	91138-1008-0000	六角头螺栓 M8×40	STUD M8×40	2	
3	1572B-1008-0000	气门密封垫圈	VALVE SEAT SEAL ASSY	2	
4	81300-1006-0000	火花塞 (D8RTC)	SPARK PLUG (D8RTC)	1	
5	90103-LA51-0001	密封环	SEAL RING, CYLINDER HEAD UPPER COVER	1	S7A
	90103-LA51-0000				S7
6	11226-LA73-0000A	缸盖 (缸盖)	CYLINDER HEAD UPPER COVER	1	S7A
	11226-LA73-0000				S7
7	116101-0001	螺栓 M6×25	BOLT M6×25	2	
8	B05789000600127	螺栓 M6×14	BOLT M6×14	1	
9	93301-70651512000	垫圈 6×1.5×12.5	WASHER 6×1.5×12.5	1	
10	1122B-LA73-0001A	缸盖 (缸盖, M8×58)	CYLINDER HEAD ASSY	1	S7A
	1122B-LA73-0001				S7
11	90101-20335000300	O型圈 33.5×3	O-RING 33.5×3	1	
12	15800-L044-0041	进气门 (XS7#, 缸盖)	PIPE COMP, INTAKE	1	
13	B06170000600009	GB6170 螺母 M6	NUT M6	2	
14	B0578300060020700	螺栓 M6×22	BOLT M6×22	2	
15	91104-LA51-0000	螺栓 M8×83	BOLT M8×83	1	
16	93301-80852218000	垫圈 8×2×18	WASHER 8×2×18	1	
17	9022B-LA73-0000A	缸盖垫圈	GASKET ASSY, CYLINDER HEAD	1	S7A
	9022B-LA73-0000				S7
18	91521-10002000000	销 10×20	DOWEL PIN 10×20	2	
19	1110B-LA73-0000A	缸盖 (缸盖)	CYLINDER BLOCK COMP	1	S7A
	1110B-LA73-0000				S7
20	90205-LA73-0000	缸盖垫圈	GASKET, CYLINDER BLOCK	1	
21	115100-0045	螺栓 M6×55	BOLT M6×55	4	

www.seacubemoto.com

□□□□ VALVE MECHANISM

A9

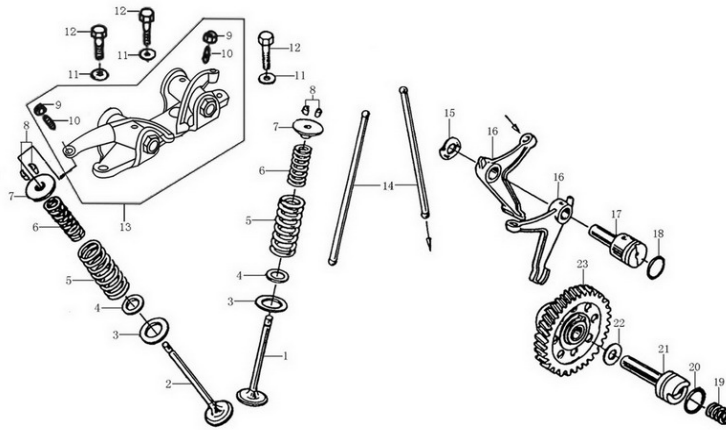


RefNo.		Chinese Description	English Description	Q'ty	
1	15701-LA66-0000	进气门	INLET VALVE	1	
	15701-LA66-0000A				
	15701-LA66-0000VA				
2	15702-LA66-0000	排气门	OUTLET VALVE	1	
	15702-LA66-0000A				
	15702-LA66-0000VA				
3	15706-I008-0000	气门座圈	SPRING SEAT VALVE	2	
4	15708-I008-0000	气门座圈	INNER SPRING SEAT, VALVE	2	
5	15703-I008-0000	气门座圈	OUTER SPRING	2	
6	15704-I008-0000	气门座圈	INNER SPRING	2	
7	15705-I006-0000	气门座圈	RETAINER, VALVE SPRING	2	
8	15707-I006-0000	气门座圈	VALVE COTTER	4	
9	15403-I008-0000	气门座圈	ADJUSTING NUT, VALVE CLEARANCE	2	
10	15404-I008-0000	气门座圈	ADJUSTING SCREW, VALVE CLEARANCE	2	
11	93301-80852218000	8×2×18	WASHER 8×2×18	3	
12	91180-1A20-0000	M8×28	BOLT M8×28	3	
13	1540A-1A20-0000	气门座圈	ARM ROCKER ASSY	1	
	1540A-1A20-0000A				
14	1532A-LA66-0200	气门座圈	PUSH LEVER COMP	2	
	1532A-LA66-0200A				
15	93303-51230220900	12.3×0.2×20.9	WAVE WASHER 12.3×0.2×20.9	1	
16	15407-I008-0000	气门座圈	LOWER ROCKER ARM	2	
17	15408-I008-0000	气门座圈	SHAFT, LOWER ROCKER ARM	1	
18	90101-20180000250	O-RING 17×2.5	O-RING 17×2.5	1	
19	15109-I008-0000	气门座圈	SPRING	1	
20	90101-20200000250	O-RING 20×2.5	O-RING 20×2.5	1	
21	15105-J034-0000	气门座圈	AIR MLET CAM SHAFT	1	
22	93301-51421024000	14×1×24	THRUST WASHER 14×1×24	1	
23	1510A-I008-0000	气门座圈	TIMING DRIVEN SPROCKET COMP	1	

www.seacubemoto.com

CB CRANKCASE COVER

A9

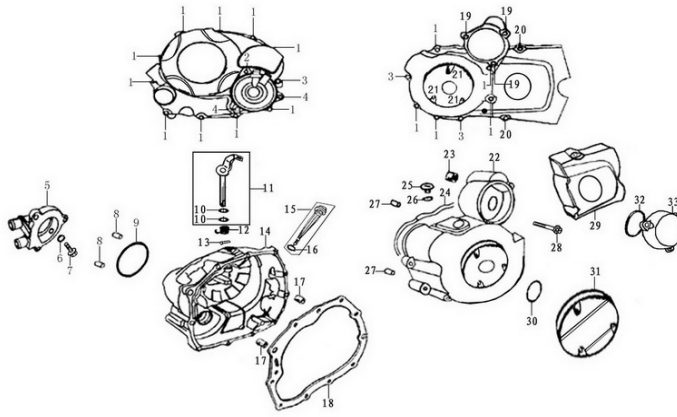


RefNo.		Chinese Description	English Description	Q'ty	
1	B166740A0600407	螺栓 M6×40	BOLT M6×40	15	
2	B166740A0600167	螺栓 M6×16	BOLT M6×16	1	
3	B166740A0600507	螺栓 M6×50	BOLT M6×50	3	
4	B166740A0600257	螺栓 M6×25	BOLT M6×25	2	
5	19001-1A20-0003	水泵盖 (罩)	WATER PUMP COVER	1	
6	90101-30085000190	O型圈 7.8×1.9	O-RING 7.8×1.9	1	
7	91132-1A20-0000	螺栓 M8×10	BOLT M8×10	1	
8	91521-08001200063	销 8×12	DOWEL PIN 8×12	2	
9	90101-30630000265	O型圈 63×2.65	O-RING 63×2.65	1	
10	90101-20087000190	O型圈 8.8×1.9	O-RING 8.8×1.9	2	
11	2242A-1006-0300	离合器杠杆总成	CLUTCH LEVER ASSY	1	
12	22427-1006-0000	离合器杠杆弹簧	CLUTCH LEVER SPRING	1	
13	B0087901030120000	GB879.1 销 3×12	POSITION PIN 3×12	1	
14	12421-1A20-0301	右曲轴箱盖总成	R.CRANKCASE COVER ASSY	1	
15	14301-1006-0000	油尺总成	OIL RULER ASSY	1	
	14301-1006-0000A				
16	90101-10180000300	O型圈 18×3	O-RING 18×3	1	
17	91521-08001400000	销 8×14	DOWEL PIN 8×14	2	
18	90206-1008-0000	垫片,右曲轴箱盖	GASKET,R.CRANKCASE COVER	1	
19	B166740A0600207	螺栓 M6×20	BOLT M6×20	3	
20	B166740A0600287	螺栓 M6×32	BOLT M6×28	2	
21	B00818000600122	螺栓 M6×12	BOLT M6×12	3	
	12301-1008-0000	左曲轴箱盖 (罩)	L.CRANKCASE COVER	1	
22	12301-1008-0000A				
	12301-1008-0000B				
23	92102-1008-0001	滚针 (HK101410)	NEEDLE BEARING (HK101410)	1	
24	90204-1008-0000	垫片,左曲轴箱盖	GASKET,L.CRANKCASE COVER	1	
25	12303-G011-0000	帽,小 视孔	CAP, SMALL SIGHT HOLE	1	
26	90101-10132000265	O型圈 13.8×2.5	O-RING 13.8×2.5	1	
27	91521-10001400000	销 10×14	DOWEL PIN 10×14	2	
28	B166740A0600257	螺栓 M6×25	BOLT M6×25	1	
	12302-1008-1000	后盖,左曲轴箱	BACK COVER,L.CRANKCASE	1	
29	12302-1008-1000A				
	100018-001				
30	90101-10274000265	O型圈 27.4×2.4	O-RING 27.4×2.4	1	
31	12307-1008-1000	装饰盖,左曲轴箱盖	DECORATE COVER ,L.CRANKCASE COVER	1	
	12307-1008-1000B				
32	90101-10620000300	O型圈 62×3	O-RING 62×3	1	
33	12308-1008-1000	盖,减速齿轮	COVER,REDUCTION GEAR	1	

www.seacubemoto.com

(CB CLUTCH

A9

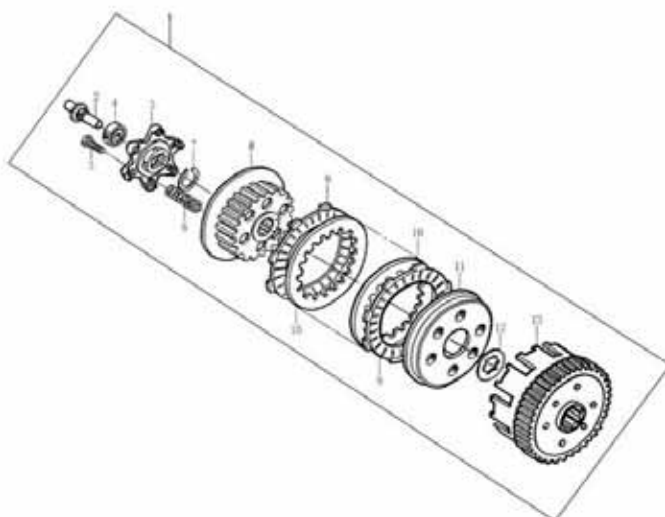


www.seacubemoto.com

RefNo.		Chinese Description	English Description	Q'ty	
1	22000-LA73-0100 22000-LA73-0100-S300	离合器总成	CLUTCH COMP	1	
2	22403-I006-0000	离合器推杆	PUSH ROD,CLUTCH	1	
3	91129-J034-00000B	M5×25 螺栓	BOLT M5×25	6	
4	92102-00000016003	6003 轴承	BEARING (6003)	1	
5	22121-LA12-0000	离合器端盖	END COVER,CLUTCH	1	
6	22142-LA73-0000	离合器弹簧	SPRING,CLUTCH	6	
7	91403-I008-0000	20 销	CIRCLIP 20	1	
8	22105-LA73-0000	离合器中心套筒	CENTRAL SLEEVE,CLUTCH	1	
9	22214-LA73-0000	离合器摩擦片总成	FRICTION PLATE ASSY	6	
10	22215-J034-0000	离合器摩擦片	FRICTION PLATE ASSY	5	
11	22122-LA73-0000	离合器压盘	CLUTCH PRESSING PLATE	1	
12	22002-I006-0000	离合器花键垫圈	SPLINE WASHER	1	
13	22150-LA73-0000	离合器外罩总成	CLUTCH OUTER CASE COMP	1	

OIL PUMP

A9

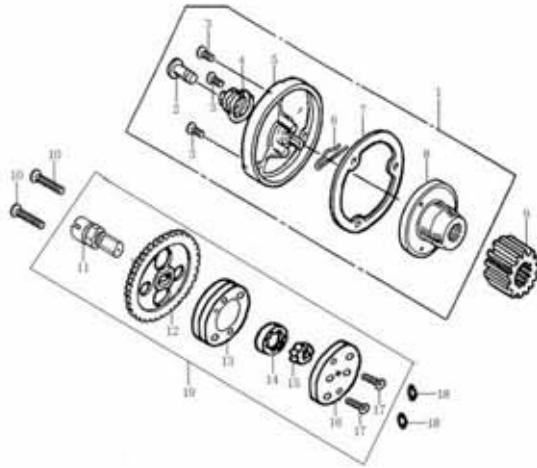


www.seacubemoto.com

RefNo.		Chinese Description	English Description	Q'ty	
1	14200-1A20-0000	油滤总成	OIL FILTER COMP	1	
2	14201-1006-0000	油封管	EX-TUBE,OIL	1	
3	B008190105001220B	十字螺丝 M5×12	SCREW M5×12	3	
4	14202-1006-0000	弹簧	SPRING,EX TUBE	1	
5	14207-1A20-0000	油滤盖	COVER,OIL FILTER	1	
6	14208-1006-0000	销	COTTER PIN,OIL FILTER	1	
7	90209-1A20-0000	油滤头盖垫圈	GASKET,FILTER HEAD COVER	1	
8	14205-1A20-0000	油滤转子总成	OIL FILTER ROTOR ASSY	1	
9	23101-1006-0000	驱动齿轮	DRIVE GEAR	1	
10	B00819010600302	十字螺丝 M6×30	SCREW M6×30	2	
11	14107-LA73-0100	驱动轴	DRIVE SHAFT,OIL PUMP	1	
12	14102-LA73-0000	驱动齿轮	DRIVE GEAR,OIL PUMP	1	
13	14110-LA73-0000	油泵壳体	OIL PUMP CASING	1	
14	14112-LA73-0000	外转子	OUTER ROTOR,OIL PUMP	1	
15	14111-LA73-0000	内转子	INNER ROTOR,OIL PUMP	1	
16	14108-1006-0000	油泵盖	OIL PUMP COVER	1	
17	B00819000400122	十字螺丝 M4×12	SCREW M4×12	2	
18	90101-10094000240	O型圈 9.4×2.4	O-RING 9.4×2.4	2	
19	14100-LA73-0000	油泵总成	OIL PUMP ASSY	1	

www.seacubemoto.com

RefNo.		Chinese Description	English Description	Q'ty	
1	B166740A0600657	□□□□□□ M6×65	BOLT M6×65	1	
2	22422-I006-0001	□□□□□	CLUTCH CABLE STAND	1	
3	91212-I008-0000	□□□□□ M8	NUT M8	4	
4	93301-C125202200B	□□□ 8.6×18×2	WASHER 8.6×18×2	4	
5	91101-LA66-0200	□□□□□□B	STUD B	2	
	91101-LA66-0200A				
6	91101-LA66-0300	□□□□ M6×28	BOLT M6×28	2	
7	B05789000600287	□□□□□	BREATHER TUBE	1	
8	B166740A0600657	□□□□□□M6×65	CLIP BREATH TURE	1	
9	12130-I008-0000	□□□□□	BREATHER TUBE	1	
10	18097-I008-0000	□□□	BREATHER TUBE	1	
	12105-I008-0000				
11	91521-10001400000	□□□ 10×14	DOWEL PIN 10×14	4	
12	92102-000NK152312	□□□□ (NK152312)	NEEDLE BEARING (NK152312)	1	
13	92102-00000006006	□□ (6006)	BEARING (6006)	1	
14	1222B-JZ02-0000	□□□□□□(□□)	R.CRANKCASE ASSY	1	
	1222B-JZ02-0000A				
15	90303-I006-0000	□□□□ 20×34×7	OIL SEAL 20×34×7	1	
16	92102-00000006204	□□ (6204)	BEARING (6204)	1	
17	91102-LA66-0200	□□□□□□A	STUDA	2	
	91102-LA66-0200A				
18	90208-LA73-0000	□□□□□□	GASKET,CRANKCASE	1	
	90208-LA73-0001				
19	1212B-JZ02-0000	□□□□□□(□□)	L.CRANKCASE ASSY	1	
	1212B-JZ02-0000A				
20	101111-0001	□□□20×15	Rubber 20×15	2	
21	101111-0002	□□□22×24.5	Rubber 22×24.5	2	
22	101111-0003	□□□20×49.7	Rubber 20×49.7	2	
23	101111-0004	□□□22×49.7	Rubber 22×49.7	2	
24	90302-I008-0000	□□□□ 34×50×7	OIL SEAL 34×50×7	1	
25	93301-71251520000	□□□□□□□ 12×2×20	WASHER 12×2×20	1	
26	91103-D002-0000	□□□□ M12×1.5	DRAIN PLUG M12x1.5	1	
27	1213B-I008-0000	□□□□□	PRESSING PIN ASSY	1	
28	92102-0000006202Z	□□ (6202Z)	BEARING (6202Z)	1	
29	B05783000600257	□□ M6×25	BOLT M6×25	1	
30	90301-I006-0000	□□□□□ 14×28×7	OIL SEAL 14×28×7	1	
31	1431B-I006-0000	□□□□□□□	OIL MESH SCREEN COMP	1	
32	14221-I006-0000	□□□□□□□	SPRING,OIL MESH SCREEN	1	
33	90101-20350000300	□□□O□□ 35×3	O-RING 35×3	1	
34	11230-I006-0000	□□□□□□	VALVE COVER	1	
35	B166740A0600707	□□□□ M6×70	BOLT M6×70	1	
36	12103-I008-0000	□□□□	PLATE	1	
37	B166740A0600127	□□□□ M6×12	BOLT M6×12	2	
38	15108-I008-0000	□□□□□□□	POSITION PLATE □CAMSHAFT	1	
39	B166740A0600507	□□□□ M6×50	BOLT M6×50	7	
40	B166740A0600607	□□□□ M6×60	BOLT M6×60	1	

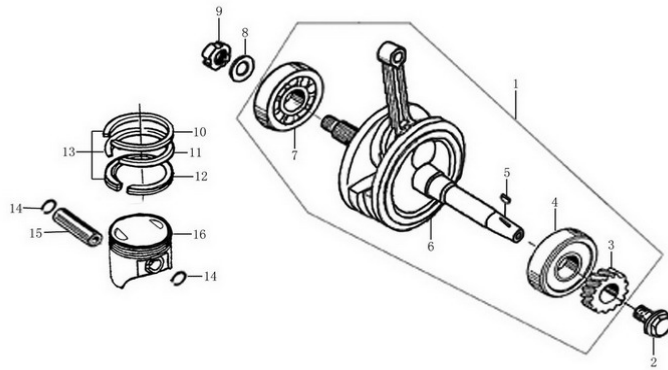


RefNo.	Part No.	Original Description	English Description	Q'ty	
1	1320B-LA73-0000	□□□□□□	CRANKSHAFT CONNECTING ROD ASSY	1	
	1320B-LA73-0000A				
	1320B-LA73-0000-S300				
	1320B-LA73-0000-S400				
2	91106-I008-0000	□□□□□ M10×35	BLOT M10×35	1	
3	13222-I008-0000	□□□□□□□□	CRANKSHAFT TIMING GEAR	1	
4	92102-63-28-RS-P5	□□□□□ (63/28-RS/P5)	BEARING (63/28-RS/P5)	1	
5	91601-I006-0000	□□□□□□ 25×14×4	SEMICIRCLE KEY 25×14×4	1	
6	13220-LA73-0000	□□□□□□	CONNECTING ROD COMP	1	
7	92102-00063-28-P5	□□□□□ (63/28/P5)	BEARING (63/28/P5)	1	
8	22004-I006-0000	□□□□□□□□	DISH WASHER	1	
9	91203-I008-0000	□□□□□□□ 16	NUT, OIL FILTER 16	1	
10	13103-LA66-0100	□□□□□□	PISTON RING 1	1	
11	13104-LA66-0100	□□□□□□	PISTON RING 2	1	
12	13120-LA66-0000	□□□□	OIL RING ASSY	1	
13	1310A-LA66-0300	□□□□□	PISTON RING COMP	1	
14	91401-I006-0000	□□□□□	CLIPCLIP, PISTON PIN	2	
15	13102-LA66-0000	□□□	PISTON PIN	1	
16	13101-LA66-0200	□□	PISTON	1	
	13101-LA66-0200-S400				

www.seacubemoto.com

TRANSMISSION MECHANISM

A9

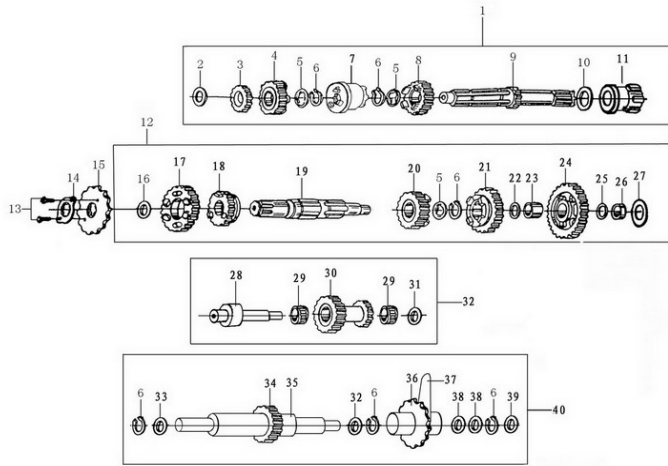


www.seacubemoto.com

RefNo.		Chinese Description	English Description	Q'ty	
1	23220-MZ01-0000	□□□□	MAIN SHAFT ASSY	1	
2	93301-E1521002500	□□□□□□ 15.2×1×25	THRUST WASHER 15.2×1×25	1	
3	23222-LA73-0002	□□□□□□	MAINSHAFT 2ND SPEED GEAR	1	
4	23222-MZ01-0000	□□□□□□	MAINSHAFT 5ND SPEED GEAR	1	
5	23223-I006-0000	□□20	SPACER WASHER	3	
6	91402-D002-0100	□□ 20	CIRCLIP 20	3	
7	23229-MZ01-0000	□□□□□□□□	REVERSE GEAR,COUNTERSHAFT	1	
8	23222-LA73-0003	□□□□□□	MAINSHAFT 3TH SPEED GEAR	1	
9	23221-LA73-0000	□□	PIVOT, MAINSHAFT	1	
10	93301-62020527000	□□□□□□ 20×0.5×27	THRUST WASHER 20×0.5×27	1	
11	23231-JZ02-0000	□□□□□□□□	ASSEMBLY, STARTING GEAR	1	
12	23240-MZ01-0000A	□□□□	ASSEMBLY, COUNTERSHAFT	1	
	23240-MZ01-0000				
13	B0578300060010700	□□ M6×10	BOLT M6×10	2	
14	23402-I006-0000	□□□□□□□□	FIXING PLATE, DRIVE SPROCKET	1	
15	23401-I008-0000	□□□□(428-15)	DRIVE SPROCKET	1	
16	93301-61521030000	□□□□□□ 20×1×27	THRUST WASHER 20×1×27	1	
17	23242-LA73-0002	□□□□□□	COUNTERSHAFT 2ND SPEED GEAR	1	
18	23242-MZ01-0004	□□□□□□	5ND SPEED GEAR	1	
19	23241-MZ01-0000	□□	PIVOT, COUNTERSHAFT	1	
20	23243-MZ01-0000	□□□□□□	REVERSE GEAR,COUNTERSHAFT	1	
21	23242-MZ01-0003	□□□□□□	COUNTERSHAFT 3RD SPEED GEAR	1	
22	93301-61650524000	□□□□ 16.5×0.5×23.5	THRUST WASHER 16.5×0.5×23.5	1	
23	23203-I006-0001	□□□□□□□□	COUNTERSHAFT 4TH SPEED GEAR	1	
24	23242-MZ01-0001	□□□□□□	SPACER WASHER	2	
25	93301-61650524000	□□□□ 16.5×0.5×23.5	THRUST WASHER 16.5×0.5×23.5	1	
26	23247-JZ02-0000	□□□□□□	COUNTERSHAFT 1ST SPEED GEAR	1	
27	107210-0007	□□□□ 15×1×29	THRUST WASHER 15×1×29	1	
28	23608-JZ02-0000	□□□□□□	SHAFT,REDUCTION GEAR	1	
29	92102-000HK121810	□□□□HK121810	NEEDLE BEARING	2	
30	23607-MZ01-0000	□□□□□□	GEAR,REOULTION	1	
31	93301-61201018000	□□□□□ 12×1×18	SHAFT,REDUCTION O-PING	1	
32	2360B-MZ01-0000	□□□□□□□□	GEAR,REOULTION ASSEMBLY	1	
	2360B-MZ01-0000A				
33	91402-D002-0100	□□φ18.5×1.2×φ22.1	THRUST WASHER φ18.5×1.2×φ22.1	1	
34	23604-MZ01-0000	□□□□	IDLE GEAR CONP	1	
35	23602-JZ02-0000	□□□□	IDLE GEAR CONP STARTEAR	1	
36	23236-MZ01-0000	□□□□□	COUNTERSHAFT 1ST SPEED	1	
37	23245-JZ02-0000	□□□□□□	LOCK UP PLY	1	
38	93301-52020527000	□□□□□□ 20.2×0.5×27	THRUST WASHER 20.2×0.5×27	2	
39	93301-E1201018000	□□	WASHER	1	
40	23601-MZ01-0000				
	23601-MZ01-0000A				

[illegible]

MAGNETO COMP


A9

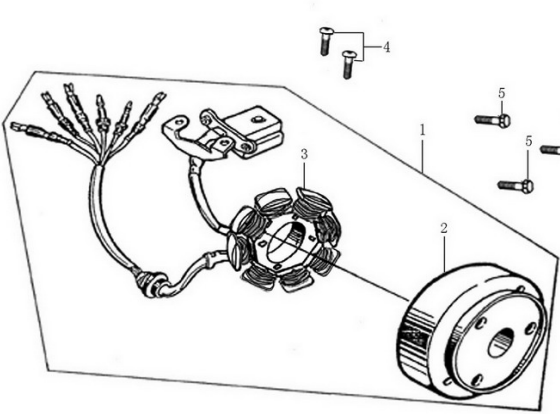

RefNo.	Chinese Description	English Description	Q'ty
1	82100-I008-0000	MAGNETO	1
2	82130-I008-0000	ROTOR ASSY,MAGNETO	1
3	82120-I008-0100	STATOR ASSY,MAGNETO	1
4	B00823000500162	BOLT M5×16	2
5	B05783000500257	BOLT M5×25	3

ELECTRIC STARTING MECHANISM

A9

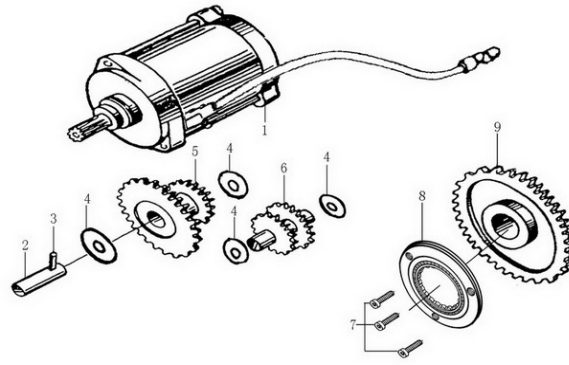


www.seacubemoto.com

Ref No.		Chinese Description	English Description	Q'ty	
1	82200-LA73-2000	电动机	STARTING MOTOR ASSY	1	
	82200-LA73-2000A				
2	21402-I008-0100	齿轮轴	GEARSHAFT,CONNECTED	1	
3	91522-03000600000	定位销 3×6	LOCATING PIN 3×6	1	
4	93301-51050518000	垫圈 10.5×0.5×18	WASHER 10.5×0.5×18	4	
5	2140A-I008-0103	齿轮	GEAR,CONNECTED	1	
	2140A-I008-0103-B				
	2140A-I008-0103-C				
	21401-I008-1100	齿轮	GEAR,CONNECTED	1	
6	21401-I008-1100-B				
	21401-I008-1100-C				
7	B0070010800187	螺钉 M8×18	SCREW M8×18	3	
8	21300-LA73-0000	启动离合器	STARTER CLUTCH COMP	1	
9	21422-LA73-0000	启动齿轮	STARTER GEAR	1	
	21422-LA73-0000A				

WATER COOLING SYSTEM

A9

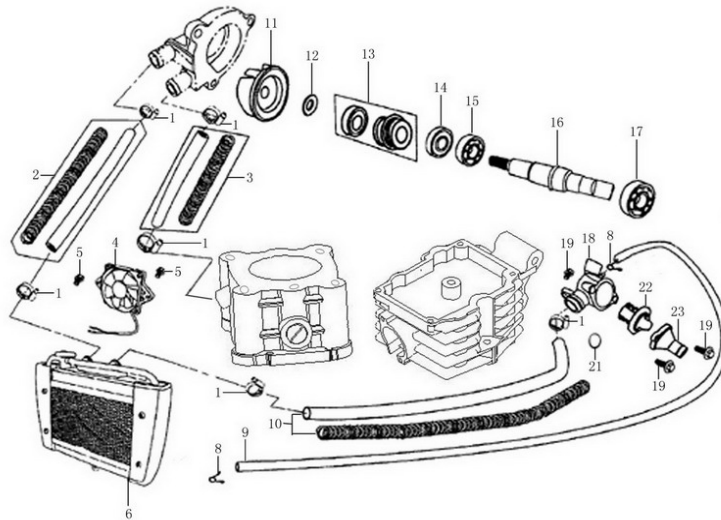

www.seacubemoto.com

RefNo.		Chinese Description	English Description	Q'ty	
1	19520-1A20-0000	□□□□(13-23mm)	WATER PIPE COLLAR CLAMP ASSY	2	
2	19225-1A20-0006		TUBE (13×20×300)		
3	19225-1A20-0002	□□□□1 (13×20×225 □□□)	TUBE (13×20×225)	1	
4	1910B-1A20-0000		COOLING FAN ASSY		
5	B166740A0600207		BOLT M6×20		
6	19200-1A20-0000		WATER COOLER		
7	1925A-1A20-0000		already cancelled		
8	91404-1A20-0000		CLIP , WATER PIPE		
9	19207-1A20-0002		SMALL CIRCULATING FEEDING PIPE (3.5×7×850)		
10	19225-1A20-0008		TUBE (13×20×400)		
11	19002-1A20-0000	□□□□	VANE WHEEL WATER PUMP	1	
	19002-1A20-0011				
12	19003-1A20-0000	□□□□	GASKET, VANE WHEEL WATER PUMP	1	
13	1901B-1A20-0000	□□□□□	MECHANISM SEAL ASSY	1	
14	90326-1024-0000	□□□□□ 12×20×5	OIL SEAL 12×20×5	1	
15	92102-00000006901	□□ (6901)	BEARING (6901)	1	
16	19004-1A20-0000	□□□	SHAFT , WATER PUMP	1	
17	92102-00000006000	□□ (6000)	BEARING (6000)	1	
18	1921B-1A20-0000	□□□□□(□□)	CASE , THERMOSTAT	1	
19	B166740A0600167	□□□□ M6×16	BOLT M6×16	3	
21	90101-30148000190	O□□□□ 14.8×1.9	O-RING 14.8×1.9	1	
22	1920A-1024-0000	□□□	THERMOSTAT ASSY,COOLING	1	
23	19220-1A20-0000	□□□□	THERMOSTAT COVER	1	
20	19206-1024-0000				