

	Part Number	Description
1	100A7988-4	DC VOLTAGE ISOLATOR
2	100E5237-3	QTTM MODULE
3	100E5936F2	DIFFERENT VOLTAGE MODULE
4	100E6722F2	DIVERT CONTROL ASSEMBLY
5	100E6770-2	PC BOARD
6	479U167D1	STARTER
7	479U167D2	STARTER
8	479U167D3	STARTER
9	479U264D2	STARTER
10	479U264D4	STARTER
11	49U26D2	BLOWER
12	49U26D9	BLOWER
13	49Z383	BLOWER
14	75Q725D1/R5877D1	DC CONTACTOR
15	75R2F1	REACTOR
16	79E5233D7	MCCB
17	79E6034D11	MCCB
18	79Q725D1	DC CONTACTOR
19	79U2410	VACCUM CONTACTOR
20	80Z1004D16	RESISTOR 70W 500 OHM
21	80Z1004D31	RESISTOR 70W 1.2K
22	84Q4D2	CAPACITOR
23	84Q4D4	CAPACITOR
24	975E601-1	REACTOR
25	975E605-1	REACTOR
26	975E631F1	REACTOR
27	975E644F1	REACTOR
28	979E328F5	SCR MODULE
29	979E328F6	SCR MODULE
30	980F52-1	RESISTOR ASSEMBLY
31	R12599D1F2	BLOWER
32	R12601D1	RPC MAIN BREAKER
33	R21161D1F1	BLOWER
34	6SY7000-0AD56	CAPACITOR

35	6SY7000-0AD84	CAPACITOR
36	6SY7000-0AE00	CAPACITOR
37	84Q10D3	CAPACITOR
38	84Q10D2	CAPACITOR
39	979A2301F3	DV/DT ASSEMBLY
40	979A2301F4	DV/DT ASSEMBLY
41	979E326F5	DV/DT ASSEMBLY
42	979E326F6	DV/DT ASSEMBLY
43	R5877D1	Contactora
44	1079Z6828	Contact Kit

Application	
P&H 2800XPB	
P&H 4100XPC 2301XPC	
P&H 2800XPB	
P&H 4100XPC 2300XPC	
P&H 2300XPC	
P&H 2300XP 2800XPB	
P&H 2300XP 2801XPB	
P&H 2300XP 2802XPB	
P&H 2300XP 2803XPB	
P&H 2300XP 2803XPB	
P&H 2300XPC	
P&H 2300XPC	
P&H 2300XPC	
P&H 2300XPC 2800XPC 4100XPC	
P&H 2300XP	
P&H 2300XPC	Eaton MCCB
P&H 2300XPC	Eaton MCCB
P&H 2100XP	Eaton
P&H 4100XPC 2800XPC 2300XPC	Eaton MVC
P&H 4100XPC 2800XPC 2300XPC	
P&H 4100XPC 2800XPC 2300XPC	
P&H 2300XP	
P&H 4100XPC 2800XPC 2300XPC	
P&H 4100XPC 2800XPC 2300XPC	
P&H 2300XP	
P&H 2300XP	
P&H 4100XPC 2800XPC 2300XPC	
P&H 4100XPC 2800XPC 2301XPC	
P&H 4100XPC 2800XPC 2301XPC	
P&H 4100XPC 2800XPC 2301XPC	
P&H 2300XPC	
P&H 4100XPC 2800XPC 2300XPC	Eaton MCCB
P&H 2300XPC	
WK35 SHOVEL	

[illegible]































