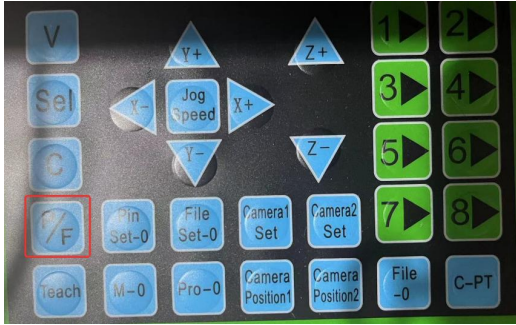

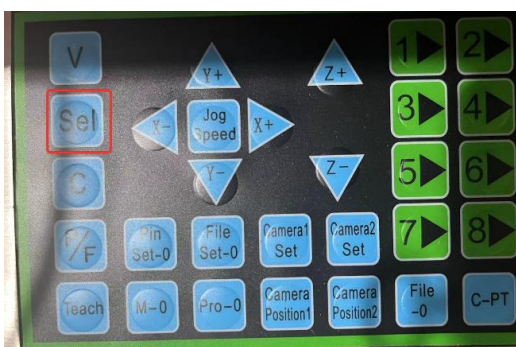





CHANGE LCD CHINESE TO ENGLISH

steps	Introduction	Panel operation	LCD displayed
1	open machine power within 5 second (there is Bee sound) , please immediately press P/F button .	 <p>The image shows the control panel with the 'P/F' button highlighted by a red box. The panel includes buttons for V, Sel, C, Pin Set-0, File Set-0, Camera1 Set, Camera2 Set, Teach, M-0, Pro-0, Camera Position1, Camera Position2, File -0, and C-PT, along with directional keys and numeric keys 1-8.</p>	 <p>The LCD screen displays the following text in Chinese: 东莞市维度自动化设备有限公司 (Dongguan Wewu Automation Equipment Co., Ltd.), 请回机器零点 (Please return machine zero), 速度: 中 (Speed: Medium), 阀数12 (Valve count: 12), 文件8 (File: 8), and the website www.weldo.com.cn.</p>
2	press Sel to choose E . (E: ENGLISH , C : Chinese	 <p>The image shows the control panel with the 'Sel' button highlighted by a red box.</p>	 <p>The LCD screen shows the same Chinese text as in step 1, but the 'E' in the '速度: 中 E: 1 K 文件8' line is highlighted by a red box.</p>
3	Press Teach on panel to choose E	 <p>The image shows the control panel with the 'Teach' button highlighted by a red box.</p>	 <p>The LCD screen now displays the following text in English: 东莞市维度自动化设备有限公司 (Dongguan Wewu Automation Equipment Co., Ltd.), Machine Zero, speed: Mi, Stat : Idle, Pin 1, and the website www.weldo.com.cn.</p>