

OBDLink SX

Quick Start Guide



 **Windows**

1 Install OBDwiz software




Download "**OBDwiz for Windows**".
Run the installer to set up the software.



2 Connect OBDLink SX to the PC


The LED will turn **yellow** when you connect OBDLink SX to the PC's USB port.

— *Red LED? Drivers were not installed properly.*

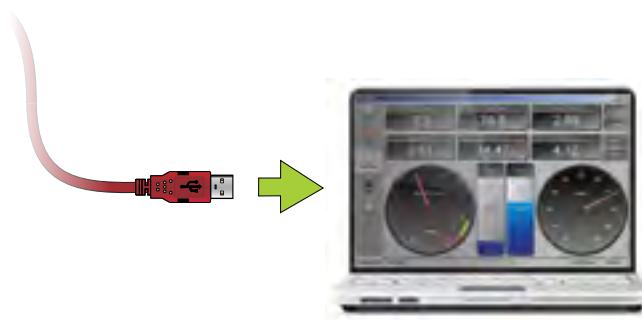


3 Plug OBDLink SX into the OBD port

The OBD port is usually found on the driver's side, under the dash.

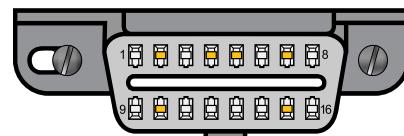

4 Turn ignition to Key On, Engine Off

The LED will turn **green**.

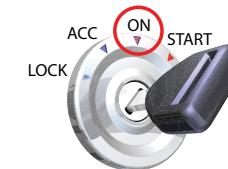

Vehicles with push button start: press the button without stepping on the brake pedal.


— *Yellow LED? Check for blown fuses.
(OBD port, auxiliary port, and the cigarette lighter).*

5 Launch OBDwiz software

Click **Start > Programs > OBDwiz > OBDwiz**.

6 Activate OBDwiz

Click the '**Connect**' button:

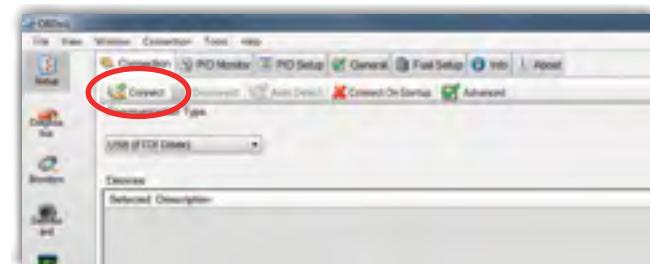

Follow the prompts to activate the software and begin using your OBDLink SX.

– Need help? Go to obdlink.com/support
or scan the QR code



Thank you for your purchase!

If you like OBDLink SX
please post your review on



CE Declaration of Conformity

3/23/2018

OBD Solutions LLC hereby confirms that the product branded
"OBDLink" complies with:

- REACH EC No 1907/2006 - SVHC
- ROHS Directive 2011/65/EU
- CE Conformity date of issue: September 16, 2015

