



气缸头部件/气缸体部件CYLINDER HEAD ASSY/CYLINDER ASSEMBLY					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 RE MARK
1	91201-I006-00000X	CB125脚缸头盖盖形螺母M8 (兰白锌)	NUT M8	4	
2	93301-80852018000	CB125盖形螺母铜垫圈8.5×2×18	WASHER 8.5×2×18	4	
3	B166740A06003570X	GB16674小盘螺栓M6×35 (兰白锌)	BOLT M6×35	4	
4	11230-I006-00000G	CB125脚气门室盖 (白铬)	COVER, VALVE CHAMBER	2	
5	90101-20350000300	CB125气门盖O形圈35×3 (氟硅胶)	O-RING 35×3	2	
6	81300-I006-0000	CB125脚火花塞部件	SPARK PLUG	1	
7	91521-08001400000	70定位销8×14×6.3	PIN 8×14×6.3	2	
8	11015-I006-0000	CB125脚橡胶油塞	RUBBER, CASING CAP	1	
9	1122B-J025-000086	CB150D气缸头组合 (8806) M6/54	CYLINDER HEAD ASSY	1	
10	90101-20335000300	CB125进气管O形圈33.5×3 (氟硅胶)	O-RING 33.5×3	1	
11	91127-I006-0000	CB125脚进气管双头螺栓 (普通 L:27mm)	BOLT	2	
12	15800-I006-0018	CB125脚进气管组合 (JQ-18)	INLET PIPE	1	
13	B061700006000090X	GB6170螺母M6 (兰白锌)	NUT 6	2	
14	B057830006002070X	GB5783螺栓M6×20 (兰白锌)	BOLT M6×20	2	
15	B061700006000090X	GB6170螺母M6 (兰白锌)	NUT 6	2	
16	17100-0000-0078	CG150D化油器 (PZ27 手动无泵)	CARBURETOR	1	
17	91138-I008-00000X	CG125D缸头排气口双头螺栓M6×35 (兰白锌)	BOLT M6×35	2	
18	91121-I006-00000X	CB125脚缸头箱体连接螺栓M6×110 (兰白锌)	BOLT M6×110	1	
19	93301-3062201300B	70缸头盖铁垫圈6.2×2×13 (白锌)	WASHER 6.2×2×13	1	
20	91521-10002000000	CG125脚定位销10×20	PIN 10×20	3	
21	90101-20100000160	CB125缸头气门导管O形圈10×1.6 (氟硅胶)	O-RING 10×1.6	1	
22	90101-20750000265	CB125气缸头左盖O形圈75×2.65 (氟硅胶)	O-RING 75×2.65	1	
23	90202-I006-0000	CB125脚气缸头左盖密封垫	GASKET, L, CYLINDER HEAD COVER	1	
24	11227-I006-100186	CB125脚气缸头左盖 (CDI 鲸鱼款 8806)	LEFT COVER, CYLINDER HEAD	1	
25	B166740A06002070X	GB16674小盘螺栓M6×20 (兰白锌)	BOLT M6×20	2	
26	9022B-J025-0000	CB150D气缸头密封垫组合	GASKET ASSY, CYLINDER HEAD	1	
27	1110B-J025-000086	CB150D气缸体部件 (缸标144 8806)	CYLINDER ASSEMBLY	1	
28	90205-J025-0000	CB150D气缸体密封垫	GASKET, CYLINDER BLOCK	1	
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

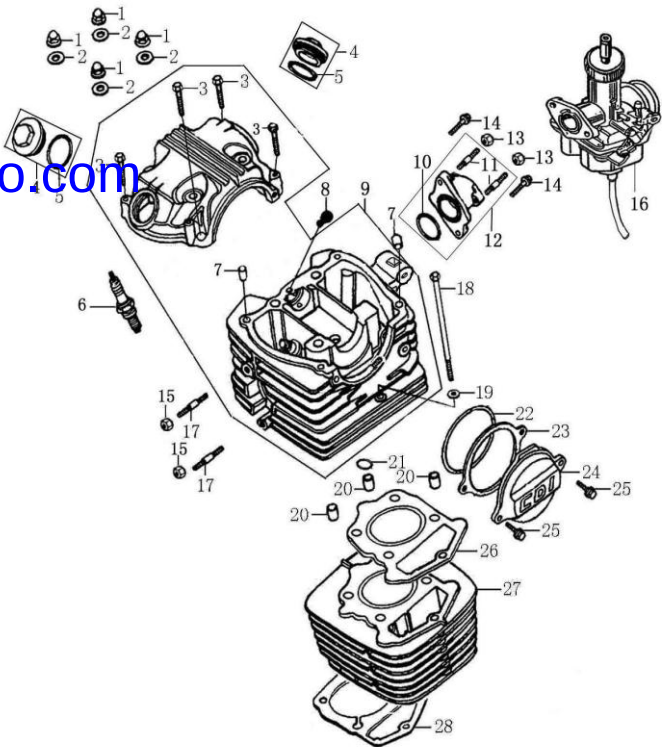

气缸头部件/气缸体部件
CYLINDER HEAD ASSY/CYLINDER ASSEMBLY

配气机构 VALVE MECHANISM					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	15403-I006-0000	CB125脚气门间隙调节螺母	NUT, VALVE CLEARANCE	2	
2	15404-I006-0000	CB125脚气门间隙调节螺钉	SCREW, VALVE CLEARANCE	2	
3	1540A-I006-0000	CB125脚气门摇臂组合	ROCKER ARM ASSEMBLY, VALVE	2	
4	15707-I008-0000	CG125D气门锁夹	VALVE COTTER	4	
5	15705-I006-0000	CB125脚气门弹簧座(上)	SPRING SEAT	2	
6	15710-I006-0000	CB125脚气门内外弹簧组合	INNER SPRING, ASSY	2	
7	1572B-I008-0000	CG125D挡油罩组合	SEAL, VALVE STEM	2	
8	15708-I008-0000	CG125D气门内弹簧座圈(下)	SPRING SEAT	2	
9	15706-I008-0000	CG125D气门外弹簧座圈(下)	RETAINER, VALVE SPRING	2	
10	15702-J025-0000	CB150D排气门	EXHAUST VALVE	1	
11	15701-J025-0000	CB150D进气门	INLET VALVE	1	
12	1553A-I006-0000	CB125脚链条导向板组合	GUIDE PLATE CHAIN	1	
13	15301-I006-0000	CB125脚正时从动链轮	TIMING DRIVEN SPROCKET	1	
14	B057830006001070B	GB5783螺栓M6×10(白锌)	BOLT M6×10	2	
15	1532B-I049-0000	CB125D正时链条组合(98)	SPROKET CHAIN	1	
16	1552A-I049-0000	CB125D链条张紧板组合	TENSION PLATE ASSY	1	
17	93301-70851514000	70导向销轴铝垫圈8.5×1.5×14	WASHER 8.5×1.5×14	1	
18	91109-I006-00000X	CB125脚张紧条芯轴螺栓(兰白锌)	BOLT	1	
19	90211-I049-0000	CB125D张紧器密封垫	GASKET, TENSIONER	1	
20	1554B-I049-000086	CB125D张紧器组合(8806)带螺栓和密封圈	LIFTER ASSY	1	
21	B000700106001670X	GB70.1螺钉M6×16(兰白锌)	SCREW M6×16	2	
22	90101-20090000180	CB125张紧器O形圈9×1.8(氟硅胶)	O-RING 9×1.8	1	
23	91120-I006-0000	CB125脚张紧调节螺栓M6×10	BOLT	1	
24	15402-I006-0100	CB125脚-2#气门摇臂轴(PDK专用)	ROCKER SHAFT	2	
25	15100-I006-0200	CB125脚凸轮轴部件(冷激铸铁 CJB轴承)	GAMP SHAFT COMP	1	
26	11201-I006-0000	CB125脚气门摇臂轴定位板	POSITION PLATE,ROCKER SHAFT	1	
27	B008190106001620B	GB819.1螺钉M6×16(白锌)	SCREW M6×16	1	
28	2143B-I049-0000	CB125D链条护板组合	ASSEMBLY, CHAIN PROTECT PLATE	1	
29	B057830006001670B	GB5783螺栓M6×16(白锌)	BOLT M6×16	1	
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

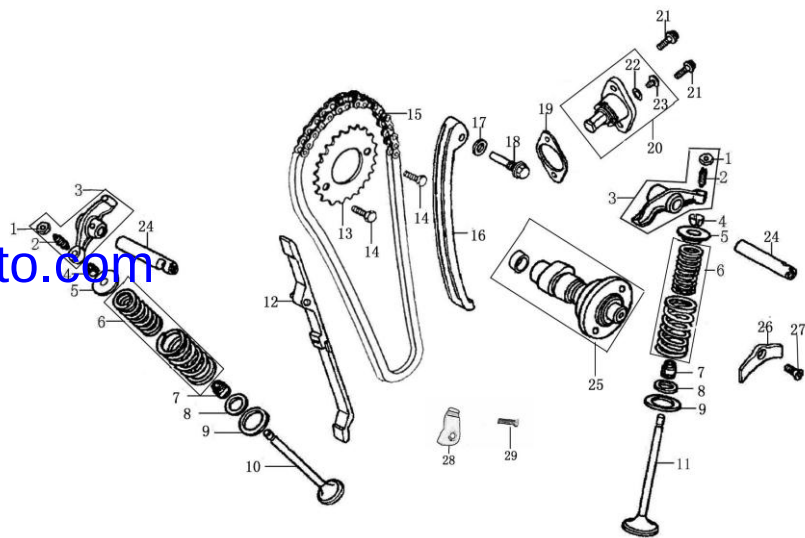


配气机构 VALVE MECHANISM


曲轴箱盖 CRANKCASE COVER					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	B166740A06002570X	GB16674小盘螺栓M6×25 (兰白锌)	BOLT M6×25	1	
2	B166740A06003570X	GB16674小盘螺栓M6×35 (兰白锌)	BOLT M6×35	1	
3	B166740A06004070X	GB16674小盘螺栓M6×40 (兰白锌)	BOLT M6×40	9	
4	B166740A06005070X	GB16674小盘螺栓M6×50 (兰白锌)	BOLT M6×50	1	
5	12426-I008-0000	CG125D机油观察窗	OIL LELVE SIGHT WINDOW	1	
6	90304-I006-0000	CB125脚启动轴油封16×28×7 (丁腈胶)	OIL SEAL 16×28×7	1	
7	2242A-I006-00000X	CB125脚离合器操纵臂组合 (兰白锌)	CONTROLLING ARM ASSEMBLY, CLUTCH	1	
8	90306-I006-0000	CB125脚离合器操纵臂油封12×22×5	OIL SEAL 12×22×5	1	
9	22427-I006-0000	CB125脚离合器操纵臂弹簧	CLUTCH CONTROLLING ARM SPRING	1	
10	B0087901030120000	GB879. 1销 3×12	PIN 3×12	1	
11	14301-I006-0000	CB125脚机油尺组合 (白板 本色) 整体式	OIL RUTHER ASS.	1	
12	90101-I0180000300	CG125机油尺O形圈18×3 (丁腈胶)	O-RING 18×3	1	
13	12421-I049-100185	CB125D右曲轴箱盖 (ZONGSHEN 鲸鱼款 8805) 电感式	COVER COMP. RIGHT CRANKCASE	1	
14	91521-08001400000	70定位销8×14×6. 3	PIN 8×14×6. 3	2	
15	90206-I006-0000	CB125脚右曲轴箱盖密封垫	GASKET, R. CRANKCASE COVER	1	
16	B166740A06002570X	GB16674小盘螺栓M6×25 (兰白锌)	BOLT M6×25	3	
17	B008180006001220X	GB818螺钉M6×12 (兰白锌)	SCREW M6×12	4	
18	B166740A06003570X	GB16674小盘螺栓M6×35 (兰白锌)	BOLT M6×35	1	
19	B166740A06002070X	GB16674小盘螺栓M6×20 (兰白锌)	BOLT M6×20	3	
20	B166740A06002870X	GB16674小盘螺栓M6×28 (兰白锌)	BOLT M6×28	2	
21	B166740A06005570X	GB16674小盘螺栓M6×55 (兰白锌)	BOLT M6×55	2	
22	B166740A06004570X	GB16674小盘螺栓M6×45 (兰白锌)	BOLT M6×45	1	
23	B166740A06006070X	GB16674小盘螺栓M6×60 (兰白锌)	BOLT M6×60	1	
24	92102-I008-0001	CG125D含油轴承 (铁基)	BEARING	1	
25	12301-I049-100085	CB125D左曲轴箱前盖 (白板 鲸鱼款 8805)	FRONT PART, L. CRANKCASE COVER	1	
26	91521-08001400000	70定位销8×14×6. 3	PIN 8×14×6. 3	2	
27	90204-I049-0000	CB125D左曲轴箱前盖密封垫	GASKET, L. CRANKCASE COVER	1	
28	12303-G011-000085	C100小视孔盖 (8805)	CAP, SMALL VIEW HOLE	1	
29	90101-10132000265	C100小视孔盖O形圈13. 2×2. 65 (丁腈胶)	O-RING 13. 2×2. 65	1	
30	90101-10274000265	C100大视孔盖O形圈27. 4×2. 65 (丁腈胶)	O-RING 27. 4×2. 65	1	
31	12302-I049-070085	CB125D左曲轴箱后盖 (CB125D-JY-21# 8805)	BACK PART, L. CRANKCASE COVER	1	
32	12307-I008-10010G	CG125D左前盖装饰盖 (ZONGSHEN 鲸鱼款 白铬)	DECORATE COVER ,L. CRANKCASE COVER	1	
33	90101-10630000265	CB125D双联盖O形圈63×2. 65 (丁腈胶)	O-RING 63×2. 65	1	
34	12308-I049-100085	CB125D双联齿轮盖 (ELECTRIC STARTER 鲸鱼款 8805)	COVER , REDUCTION GEAR	1	
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

曲轴箱盖 CRANKCASE COVER


离合器总成 CLUTCH ASSY					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	22314-I008-0100	CG125D-2#离合器顶杆(五柱)	ROD, CLUTCH PUSH	1	附件
2	22401-I006-0000	CB125脚离合器分离轴套	SEPARATING AXLE SLEEVE	1	附件
3	B166740A06002270B	GB16674小盘螺栓M6×22 (白锌)	BOLT M6×22	5	
4	92102-00000016003	轴承 (16003)	BEARING (16003)	1	
5	22121-I006-0100	CB125脚离合器端盖(五柱)	END COVER, CLUTCH	1	
6	22142-I006-0000	CB125脚离合器弹簧	SPRING, CLUTCH	5	
7	91202-I006-0000	CB125脚离合器圆螺母	LOCK NUT, CLUTCH	1	附件
8	22004-I006-0000	CB125脚离合器碟形垫圈16.5×2×27	DISH WASHER, CLUTCH	1	附件
9	22105-I008-0100	CG125D离合器中心套(五柱)	CENTER SLEEVE, CLUTCH	1	
10	22214-I006-0000	CB125脚离合器主动摩擦片	DRIVE FRICTION DISK	5	
11	22215-I006-0000	CB125脚离合器从动摩擦片	OUTER FRICTION DISK	5	
12	22122-I008-0200	CG125D离合器压盘(五柱)	PRESSURE PLATE, CLUTCH	1	
13	22002-I006-0000	CB125脚离合器花键垫圈	WASHER	1	附件
14	22150-I006-0000	CB125脚离合器外罩组合	OUT CASE ASSEMBLY, CLUTCH	1	
15	22000-I006-0702	CB125脚离合器总成(五柱 不带轴承)	CLUTCH ASSY	1	
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

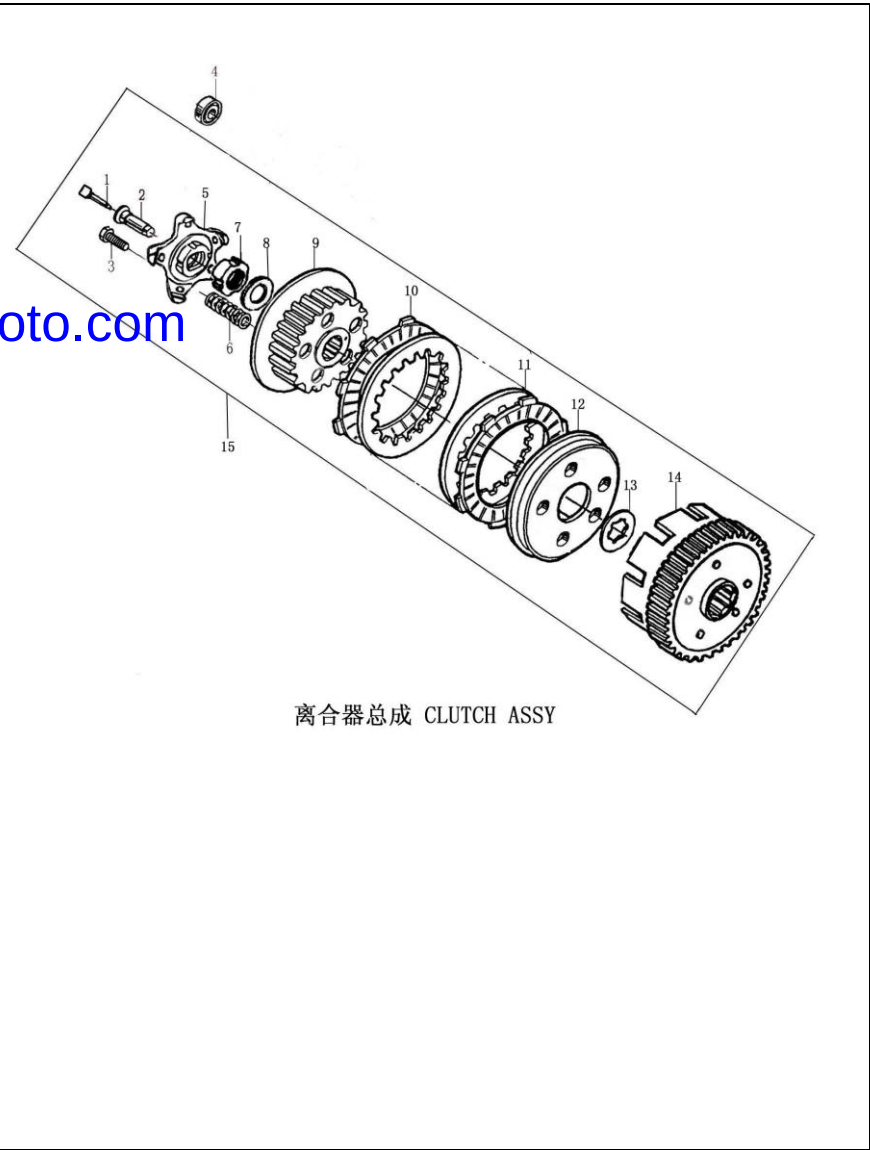

机油泵部件/机油滤清器部件 OIL PUMP/OIL FILTER					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	14200-I006-0000	CB125脚机油滤清器部件	OIL FILTER, COMP	1	
2	14201-I006-0000	CB125脚机油滤清器出油管	OIL PIPE	1	
3	B008190105001220B	GB819.1螺钉M5×12(白锌)	SCREW M5×12	3	
4	14202-I006-0000	CB125脚机油滤清器出油管弹簧	SPRING, OIL PIPE	1	
5	14207-I006-0000	CB125脚机油滤清器盖	OIL FILTER COVER	1	
6	14208-I006-0000	CB125脚机油滤清器开口销	OPEN PIN	1	
7	90209-I006-0000	CB125脚机油滤清器端盖密封垫	GASKET, OIL FILTER	1	
8	91203-I008-0000	CG125D机油滤清器薄螺母	NUT	1	
9	22004-I006-0000	CB125脚离合器碟形垫圈16.5×2×27	DISH WASHER, CLUTCH	1	
10	14205-I006-0000	CB125脚机油滤清器体	OIL FILTER BODY	1	
11	23101-I006-0000	CB125脚主动齿	PRIMARY DRIVE GEAR	1	
12	90101-10094000240	CG125机油泵O形圈9.4×2.4(丁腈胶)	O-RING 9.4×2.4	2	
13	B008180004001020B	GB818螺钉M4×10(白锌)	SCREW M4×10	2	
14	14108-I008-0000	CG125D机油泵盖板	OIL PUMP COVER	1	
15	14111-I008-0000	CG125D机油泵内转子	INNER ROTOR, OIL PUMP	1	
16	14112-I008-0000	CG125D机油泵外转子	OUTER ROTOR, OIL PUMP	1	
17	14110-I008-0000	CG125D机油泵体(电感式)	OIL PUMP BODY	1	
18	B0011902025100000	GB119.2销2.5×10	PIN 2.5×10	1	
19	14107-I008-0000	CG125D机油泵油泵轴(电感式)	SHAFT, OIL PUMP	1	
20	1410B-I006-0000	CB125脚机油泵齿轮组合	OIL PUMP GEAR ASS.	1	
21	B0089600060000000	GB896挡圈6	CIRCLIP 6	1	
22	B008190106003020B	GB819.1螺钉M6×30(白锌)	SCREW M6×30	2	
23	14100-I006-0000	CB125脚机油泵部件(电感式)	OIL PUMP ASSY	1	
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

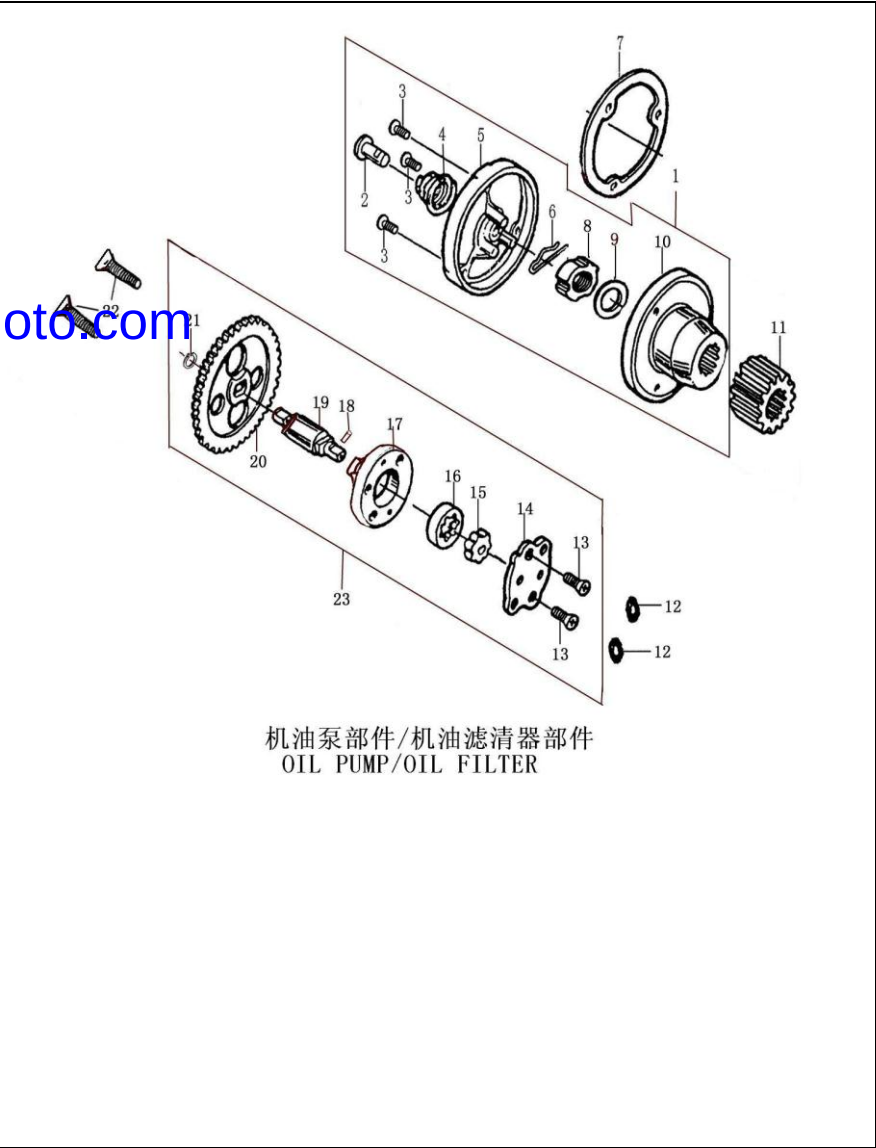


曲轴箱 CRANKCASE					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	B166740A06006070X	GB16674小盘螺栓M6×60 (兰白锌)	BOLT M6×60	1	
2	22422-I006-00010X	CB125脚-2#离合器钢索支架 (兰白锌)	HOLDER, CLUTCH CABLE	1	
3	91101-I006-0000	CB125脚气缸双头螺栓A	CYLINDER STUD BOLT A	1	
4	91101-I006-0100	CB125脚-2#气缸双头螺栓A (PDK专用)	CYLINDER STUD BOLT A	1	
5	18097-I008-0000	CG125D废气循环管 I 卡箍	CLAMP	1	
6	12105-I008-0001	CG125D-1#通气管 (复合层材料)	BREATHER PIPE	1	
7	12130-I008-0001	CG125D-1#通气管组件 (复合层材料 卡箍1个)	PIPE ASSY	1	
8	1222B-I049-000085	CB125D右曲轴箱组合 (8805)	RIGHT CRANKCASE BLOCK	1	
9	91521-10001400000	CG125脚定位销10×14	PIN 10×14	4	
10	91102-I006-0100	CB125脚-2#气缸双头螺栓B (PDK专用)	CYLINDER STUD BOLT B	2	
11	90208-I049-0000	CB125D曲轴箱密封垫	GASKET, CRANKCASE	1	
12	1212B-I049-000085	CB125D左曲轴箱组合 (8805)	LEFT CRANKCASE BLOCK	1	
13	1431B-I006-0000	CB125脚机油过滤网组合	STRAINER, OIL FILTER	1	
14	14221-I006-0000	CB125脚机油过滤网弹簧	SPRING, OIL FILTER STRAINER	1	
15	90101-20350000300	CB125气门盖O形圈35×3 (氟硅胶)	O-RING 35×3	1	
16	11230-I006-00000W	CB125脚气门室盖 (抛丸钝化)	COVER, VALVE CHAMBER	1	
17	90301-I006-0000	CB125脚换挡臂油封14×28×7 (丁腈胶)	OIL-SEAL 14×28×7	1	
18	88001-I049-0600	CB125D档显板 (五档循环档)	GEARSHIFT SWITCH PLATE	1	
19	91204-I049-0000	CB125D档显板螺母M10	NUT	1	
20	8803B-I049-060045	CB125D档显线束组合 (五档循环 L:450) 接口D03	GEARSHIFT SWITCH LAMP	1	
21	12103-I008-0000	CG125D档线片	POSITION PLATE	1	
22	B166740A06001270B	GB16674小盘螺栓M6×12 (白锌)	BOLT M6×12	1	
23	B166740A06005070X	GB16674小盘螺栓M6×50 (兰白锌)	BOLT M6×50	10	
24	B166740A06003270X	GB16674小盘螺栓M6×32 (兰白锌)	BOLT M6×32	2	
25	92102-I008-0001	CG125D含油轴承 (铁基)	BEARING	1	
26	92102-00000006204	轴承 (6204)	BEARING (6204)	1	
27	90303-I006-0000	CB125脚副轴油封20×34×7 (丁腈胶)	OIL SEAL 20×34×7	1	
28	92102-000NK152312	滚针轴承 (NK152312)	BEARING (NK152312)	1	
29	92102-0000006202Z	轴承 (6202Z)	BEARING (6202Z)	1	
30	92102-00000006006	轴承 (6006)	BEARING (6006)	1	
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

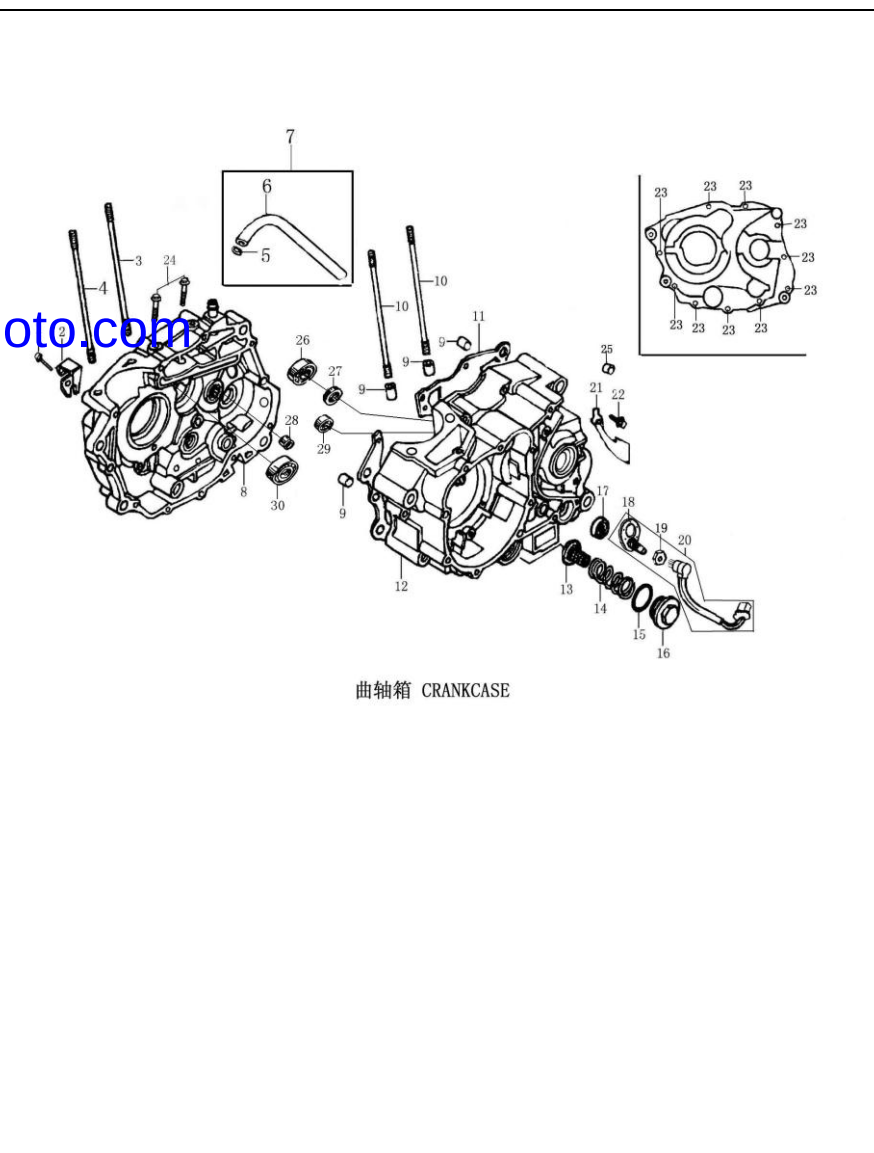

曲轴连杆部件/活塞 CRANKSHAFT CONNECTING-ROD ASSY/PISTON					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 REMARK
1	13103-J025-0000	CB150D活塞环一	PISTON RING 1	1	
2	13104-J025-0000	CB150D活塞环二	PISTON RING 2	1	
3	13120-J025-0000	CB150D油环组合	OIL RING ASSY	1	
4	1310A-J025-0000	CB150D活塞环总成	PISTON RING COMP	1	
5	91401-I006-0000	CB125脚踏离合器挡圈	CLIP, PISTON PIN	2	
6	13102-J025-0000	CB150D活塞销	PIN PISTON	1	
7	13101-J025-0200	CB150D-2#活塞 (PDK专用)	PISTON	1	
8	92102-00063-28-P5	轴承 (63/28/P5)	BEARING (63/28/P5)	2	
9	13220-I049-2001	CB125D-5#曲轴连杆组合 (无轴承、半圆键、主动齿) KU左曲柄仿CG	CONNECTING ROD COMP 3	1	
10	91601-I008-0000	CG125D半圆键25×14×4	SEMICIRCULAR KEY	1	
11	13222-I049-0000	CB125D正时主动链轮 (滚子)	CHAIN DRIVE SPROCKET	1	
12	1320B-I049-2304	CB125D-5#曲轴连杆部件 (KU) 左曲柄仿CG	CRANKSHAFT CONNECTING-ROD ASSY	1	
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					


曲轴连杆部件/活塞
CRANKSHAFT CONNECTING-ROD ASSY/PISTON

主副轴组合 TRANSMISSION MAIN, COUNTER SHAFT					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	23220-I006-0000	CB125脚主轴组合	MAIN SHAFT, TRANSMISSION	1	
2	23240-I006-0000	CB125脚副轴组合	COUTERSHAFT TRANSMISSION	1	
3	93301-61521025000	CB125主轴止推垫圈 15.2×1×25	WASHER 15.2×1×25	1	
4	23222-I008-0002	CG125D五档主轴2档齿轮	GEAR M-2	1	
5	23222-I008-0005	CG125D五档主轴5档齿轮	GEAR M-5	1	
6	23223-I006-0000	CB125脚齿轮隔圈17.3(20)×1.6×26	WASHER	3	
7	B0089401200000000	GB894.1挡圈20	CIRCLIP 20	3	
8	23222-I008-0004	CG125D五档主轴4档齿轮	GEAR M-4	1	
9	23222-I008-0003	CG125D五档主轴3档齿轮	GEAR M-3	1	
10	23221-I006-0000	CB125脚主轴芯轴	TRANSMISSION MAIN SHAFT	1	
11	93301-62020527000	CB125主轴止推垫圈 20.2×0.5×27	WASHER 20.2×0.5×27	1	
12	23231-I008-0000	CG125D主轴起动齿轮组合	FINAL SHAFT	1	
13	B057830006001070B	GB5783螺栓M6×10(白锌)	BOLT M6×10	2	
14	23402-I006-0000	CB125脚主动链轮固定板	FIXING PLATE, DRIVE SPROCKET	1	
15	23401-I008-0008	CG125D主动链轮(428.15)	DRIVE SPROCKET	1	
16	93301-62021027000	70启动轴垫圈20.2×1.0×27	WASHER 20.2×1.0×27	2	
17	23242-I006-0002	CB125脚副轴2档齿轮	GEAR C-2	1	
18	23203-I006-0002	CB125脚副轴2档齿轮衬套	GEAR BUSH	1	
19	23242-I008-0005	CG125D五档副轴5档齿轮	GEAR C-5	1	
20	23241-I006-0000	CB125脚-1#副轴芯轴	TRANSMISSION COUNTER SHAFT	1	
21	23242-I008-0004	CG125D五档副轴4档齿轮	GEAR C-4	1	
22	23242-I008-0003	CG125D五档副轴3档齿轮	GEAR C-3	1	
23	93301-61670524000	CB125副轴止推垫圈 16.7×0.5×24	WASHER 16.7×0.5×24	2	
24	23203-I008-0001	CG125D副轴1档齿轮衬套	GEAR BUSH	1	
25	23242-I008-0001	CG125D五档副轴1档齿轮	GEAR C-1	1	
26	23203-I008-0003	CG125D副轴启动齿轮衬套	GEAR BUSH	1	
27	23248-I008-0000	CG125D副轴启动过桥齿轮	GEAR	1	
28	93301-61521030000	CB125副轴止推垫圈 15.2×1×30	WASHER 15.2×1×30	1	
29	23200-I006-0000	CB125脚-1#主副轴组合(副轴147)	TRANSMISSION MAIN, COUNTER SHAFT	1	
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

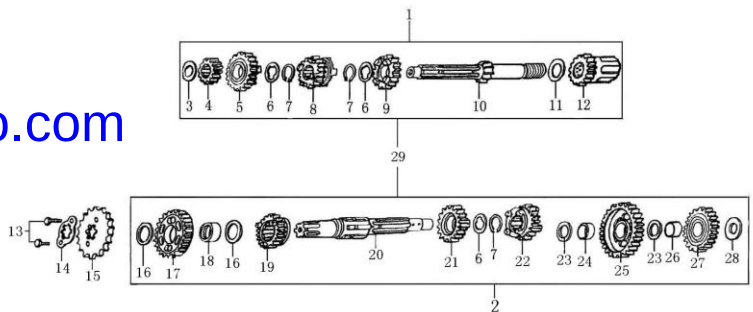


主副轴组合 TRANSMISSION MAIN, COUNTER SHAFT

启动轴总成 KICK STARTING SHAFT ASSEMBLY					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	21100-I006-0000	CB125脚启动轴总成(常用Z=29)	KICK STARTING SHAFT ASSEMBLY	1	
2	90101-10118000265	CB125启动轴螺栓O形圈11.8×2.65(丁腈胶)	O-RING 11.8×2.65	1	附件
3	91108-I006-00000X	CB125脚启动轴定位螺栓M12×25(兰白锌)	BOLT M12×25	1	附件
4	93301-51211018000	CG125D启动轴垫圈12.1×1×18	WASHER 12.1×1×18	1	附件
5	B0089401160000000	GB894.1挡圈16	CIRCLIP 16	1	
6	21123-I006-0000	CB125脚棘轮导板	GUIDE PLATE	1	
7	21119-I006-0000	CB125脚启动棘轮弹簧	SPRING, KICK STARTING RATCHET WHEEL	1	
8	21118-I006-0000	CB125脚启动棘轮	STARTING RATCHET	1	
9	91402-I008-0000	CG125D启动轴弹性挡圈Φ18.5×1.2×Φ22.4	CIRCLI Φ18.5×1.2×Φ22.4	1	
10	93301-62000527000	CG125启动轴垫圈20×0.5×27	WASHER 20×0.5×27	1	
11	21117-I008-0000	CG125D启动齿轮	GEAR, KICK STARTING	1	
12	21107-I006-0000	CB125脚启动轴芯轴	PIVOT, KICK STARTING SHAFT	1	
13	21104-I006-0000	CB125脚启动轴弹簧座	SEAT, SPRING, KICK STARTING SHAFT	1	
14	21106-I008-0000	CG125D启动轴复位弹簧	RETURN SPRING, KICK STARTING SHAFT	1	
15	21102-I006-0000	CB125脚启动轴衬套	SLEEVE	1	
16	21200-I008-0009	CG125D启动杆部件(QD-9)	START-UP BAR COMP	1	
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

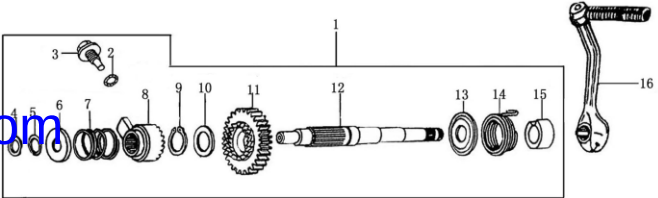


启动轴总成 KICK STARTING SHAFT ASSEMBLY

变速机构 GEARSHIFT MECHANISM					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	B0089401120000000	GB894.1挡圈12	CIRCLIP 12	1	
2	24303-I006-0000	CB125脚踏档板弹簧	SPRING, GEARSHIFT PLATE	1	
3	24319-I008-0000	CG125D换挡板(五档循环档)	GEARSHIFT PLATE	1	
4	24301-I008-00000C	CG125D换挡轴组合(五档循环档 彩锌)	GEARSHIFT SHAFT COMP	1	
5	24302-I008-0000	CG125D换挡回位弹簧	RETURN SPRING	1	
6	93301-51400520000	CB125脚踏档臂垫圈14×0.5×20	WASHER 14×0.5×20	2	
7	B0089401140000000	GB894.1挡圈14	CIRCLIP 14	1	
8	24300-I008-00010C	CG125D换挡臂部件(五档循环档 彩锌)	GEARSHIFT LEVER COMP	1	
9	B057830006002070G	GB5783螺栓M6×20(白铬)	BOLT M6×20	1	
10	24400-I008-0016	CG125D变速踏板部件(BT-16)	GEARSHIFT SHAFT	1	
11	24107-I006-0000	CB125脚拨叉轴	SHAFT, COUNTER SHAFT	1	
12	24104-I006-0000	CB125脚副轴右拨叉	RIGHT FORK, COUNTERSHAFT	1	
13	24106-I006-0000	CB125脚主轴拨叉	CENTER FORK, MAINSHAFT	1	
14	24105-I006-0000	CB125脚副轴左拨叉	LEFT FORK, COUNTERSHAFT	1	
15	B057830006002570B	GB5783螺栓M6×25(白锌)	BOLT M6×25	1	
16	B0009300060000000	GB93弹垫6	WASHER φ6	1	
17	24202-I008-0600	CG125D五星板(五档循环档)	STOPPING PLATE	1	
18	B0011901040100000	GB119.1销4×10	PIN 4×10	1	
19	24213-I006-0600	CB125脚变速鼓(五档循环档)档显	GEARSHIFT DRUM	1	
20	24304-I006-0100	CB125脚-2#定位板弹簧	SPRING ,LOCATING PLATE	1	
21	2434A-I008-0400	CG125D-2#定位板组合(五档循环档及五档非循环档)	LOCATING PLATE ASSY	1	
22	91115-I008-00000B	CG125D档位定位板螺栓(五档循环档 白锌)	BOLT FIXING PLATE	1	
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

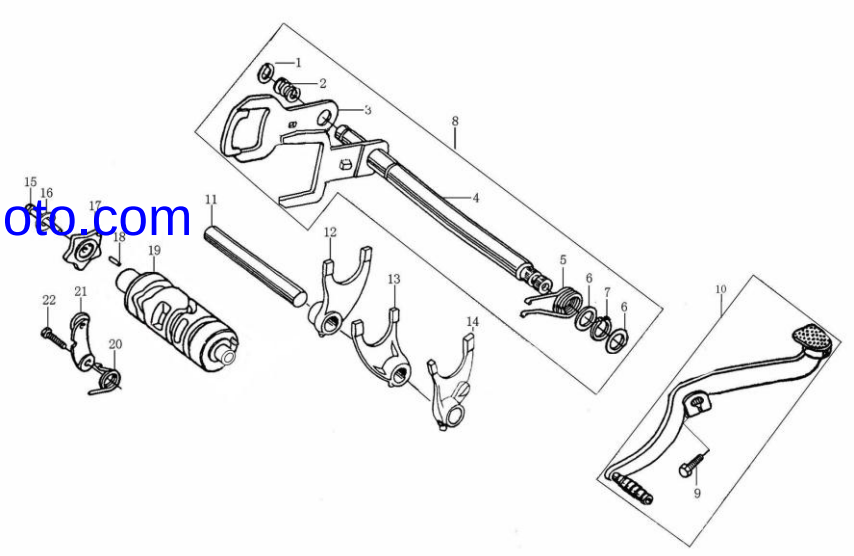


变速机构 GEARSHIFT MECHANISM

磁电机总成 MAGNETO COMP					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	B166740A06002870B	GB16674小盘螺栓M6×28(白锌)	BOLT M6×28	2	
2	82120-I049-010043	CB125D磁电机定子组合(12V8极全波交流大盒 L1:430)接口21	STATOR ASSY, MAGNETO	1	
3	91106-I008-0000	CG125D磁电机安装螺栓M10×36	BOLT M10×36	1	
4	B0009300040000000	GB93弹垫4	WASHER φ4	2	
5	B008230004001020B	GB823螺钉M4×10(白锌)	SCREW M4×10	2	
6	82130-I049-0301	CB125D-2#磁电机转子组合(12V8极 不带超越离合器)	ROTOR ASSY, MAGNETO	1	
7	21309-I049-0000	CB125D启动离合器本体	ASSEMBLY, SPIDER	1	
8	21303-I049-0000	CB125D启动离合器滚柱弹簧	SPRING	3	
9	21305-I049-0000	CB125D启动离合器弹簧套/顶销	CONE BILLOCKAGE	3	
10	21304-I049-0000	CB125D启动离合器滚柱	CLUTCH ROLLER	3	
11	21300-I049-0000	CB125D超越离合器部件	ASSEMBLY, OVERDRIVE CLUTCH	1	
12	82130-I049-0300	CB125D-2#磁电机转子组合(12V8极)	ROTOR ASSY, MAGNETO	1	
13	91197-I008-00000C	CG125D超越离合器紧固螺钉M8×18(彩锌)	BOLT M8×18	3	
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

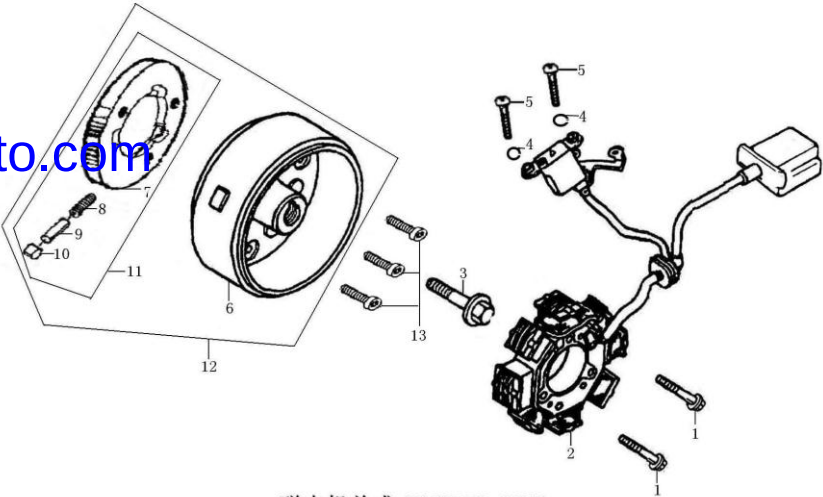



电启动机构 ELECTRIC STARTING MECHANISM					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 REMARK
1	82200-I049-010451	CB125D启动电机部件 (机座8805 机壳8805 无字 圆形 单线L:510)	STARTING MOTOR ASSY	1	
2	93301-51050518000	CG125D双联齿轮垫圈10.5×0.5×18	WASHER 10.5×0.5×18	4	
3	21402-I049-0000	CB125D双联齿轮轴	SHAFT, REDUCTION	1	
4	2140A-I049-0000	CB125D双联齿轮组合 (一)	GEAR, REDUCTION, 1	1	
5	21401-I049-0000	CB125D双联齿轮 (二)	GEAR, REDUCTION, 2	1	
6	82202-I049-0000	CB125D电机安装座圈7.95	WASHER	2	
7	2142A-I049-0100	CB125D-2#启动大齿轮组合	PLATE GEAR ASSY	1	
8	93301-E2203534000	CB125D-2#盘形齿垫圈22×3.5×34	WASHER 22×3.5×34	1	
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

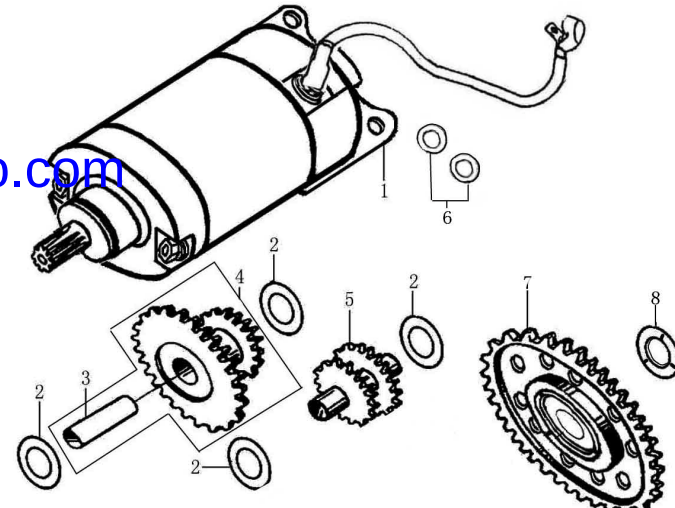


电启动机构
ELECTRIC STARTING MECHANISM

电器件 ELECTRIC					
序号 NO.	编码 (PART CODE)	中文名称 (CHINESE DESCRIPTION)	英文名称 (ENGLISH DESCRIPTION)	数量 QTY	备注 MARK
1	81100-I008-000050	高压包MG03B L:500	IGNITION COIL	1	
2	81200-I008-0000	点火器MD125-3B	C. D. I	1	
3	83100-I008-010020	整流调压器MT12V8-ZS05B	RECTIFIER	1	
4	82290-I049-000016	继电器MQJ10-ZS01A	RELAY	1	
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36					
37					
38					
39					
40					
41					
42					
43					
44					
45					

www.seacubemoto.com

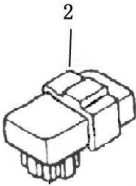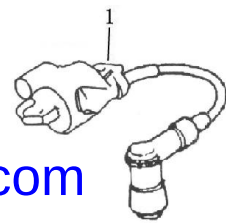

电器件 ELECTRIC

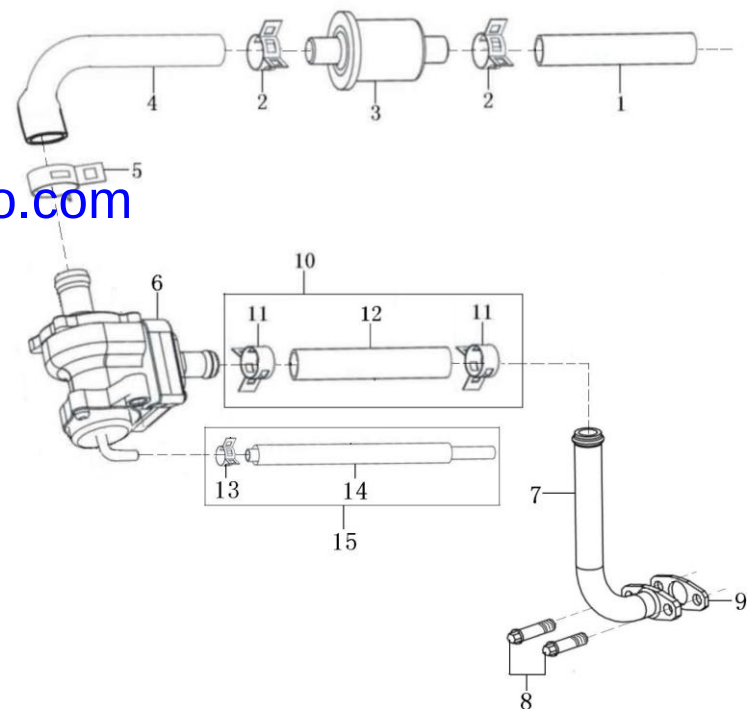

14