


SUPERLIFT SDO-C

“your automatic choice”

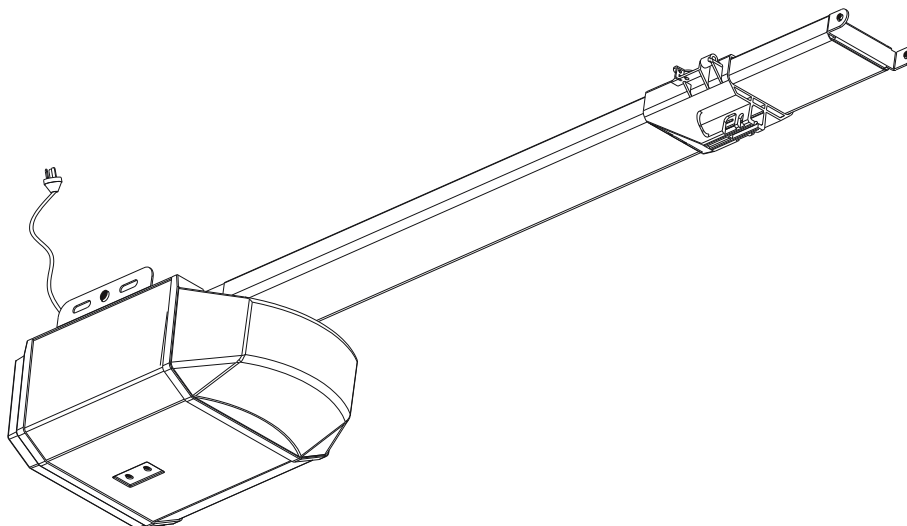

Installation Instructions and User Guide

CONTENTS

Important Safety Recommendations	4
Warranty Exclusions	5
Assembly Instructions	6
Identifying Garage Door Type	6
Assembling Drive Rail and Power Head	6
Drive Chain Assembly & Tensioning	7
Installation Instructions	8
Mounting Header Bracket	8
Mounting Towing Bracket	8
Attaching Drive Rail to Header Bracket	8
Mounting Power Head to Ceiling	9
Attaching Towing Arms	9
Adjusting Disengage Cords	10
Connecting to Power Supply	10
Settings and Adjustments	11
Disengaging from Garage Door	11
Engaging to Garage Door	11
Travel Adjustment	11
Safety Obstruction Force Adjustment	12
Hand Transmitters	13
Options and Features	14
Auto Close	14
Courtesy Lamp	14
Dip Switches	14
Learn Button	15
LED Indicator	15
Output Terminals	15
Run Button	15
Safety Beams	15
Thermal Overload	16
Wall Switch (hard wired)	17
Wall Switch (wireless)	17
Technical Specifications	17
Trouble Shooting Guide	18
Notes	19

IMPORTANT SAFETY RECOMMENDATIONS

FAILURE TO COMPLY WITH THE FOLLOWING SAFETY RECOMMENDATIONS MAY RESULT IN SERIOUS PERSONAL INJURY, DEATH AND / OR PROPERTY DAMAGE.

1. **PLEASE READ CAREFULLY AND ADHERE TO ALL SAFETY AND INSTALLATION RECOMMENDATIONS**
2. **The installation of your new Automatic Garage Door Opener (herein after referred to as “AGDO”) must be carried out by a technically qualified or licensed person. Attempting to install or repair the AGDO without suitable technical qualification may result in severe personal injury, death and / or property damage.**
3. The AGDO must only be installed on a properly balanced well functioning garage door. An improperly balanced or malfunctioning garage door could cause serious personal injury, death and / or property and / or the AGDO damage. Have a qualified person check and if required, make repairs to your garage door **before** installing the AGDO. A manually operated garage door is deemed to be well balanced and aligned if it;
 - i. requires an equivalent amount of applied force to either manually open or close, and
 - ii. requires no more than 150N (15kg) of applied force to either manually open or close, and
 - iii. does not rise or fall more than 100mm when released at any point between fully open or fully closed positions, and
 - iv. does not rub on or incorrectly make contact with any supporting or surrounding structures.
4. Repairs to the garage door must be carried out by a technically qualified person. Attempting to repair the garage door without suitable technical qualification may result in severe personal injury, death and / or property and / or AGDO damage.
5. Remove or render inoperative all existing locks and ropes prior to installation of the AGDO.
6. The counter balance springs on sectional type garage doors **must** be lubricated annually between each of the coils with heavy automotive bearing grease. Failure to adequately lubricate the springs may result in one or more of the following symptoms:
 - a. Counter balance springs may become rusty over time resulting in additional operating friction between the coils which may cause the AGDO to malfunction.
 - b. Seasonal temperature changes may cause the garage door springs to expand and / or contract. The resultant increase and / or decrease in operating friction may cause the AGDO to malfunction. Properly lubricating the springs will help to minimize changes in operating friction due to the effects of seasonal temperature change.
7. Where possible, install the AGDO at least 2 meters or more above the ground. Adjust the Engage / Disengage Cord so that it hangs approximately 1.8 meters from the ground.
8. The Engage / Disengage Instruction Tag must remain attached to the Engage / Disengage Cord.
9. Locate the Wall Switch;
 - i. within site of the garage door, and
 - ii. at a minimum height of 1.5 meters above the ground so that it remains out of the reach of small children, and
 - iii. away from all moving parts of the garage door.
10. The Entrapment Warning Label must be secured in a prominent position adjacent to the Wall Switch.
11. The AGDO must be connected to a **properly earthed** general purpose 230 ~ 240VAC power outlet which has been installed by a qualified electrical contractor.
12. Do not connect the AGDO to the power outlet until this manual instructs you to do so.
13. Subsequent to installing and adjusting the AGDO the garage door **must** stop and reverse direction when it comes into contact with a 35mm high solid object placed on the floor under the garage door.
14. The correct function of the Safety Obstruction Force System should be checked on a monthly basis.

IMPORTANT SAFETY RECOMMENDATIONS

15. Never use the AGDO unless the garage door is in full view and free from any object which may impede the movement of the garage door such as cars, children and / or adults.
16. Never allow children to operate the AGDO.
17. Never operate the AGDO when any persons are under or near the path of the garage door. Children **must** be supervised at all times when near the garage door and when the AGDO is in use.
18. Never attempt to disengage the AGDO to manual operation when there are children / persons and / or solid objects including motor vehicles under or near the path of the garage door as the garage door may fall sharply upon manual release from the AGDO.
19. Never attempt to open or close the garage door by pulling on the Engage / Disengage Cord.
20. Never attempt to make any repairs or remove covers from the AGDO without first disconnecting the power supply cord from main power supply.
21. Removal of the AGDO's protective covers must only be performed by a technically qualified person. Attempting to remove the protective covers or repair the AGDO without suitable technical qualification may result in severe personal injury, death and / or property damage.
22. For additional safety we strongly recommend the inclusion of Safety Beams. Although the AGDO incorporates a pressure sensitive Safety Obstruction Force system the addition of Safety Beams will greatly enhance the operating safety of an automatic garage door and provide additional peace of mind. In some countries it is a mandate of law to fit Safety Beams. It is the sole responsibility of the owner / installer to fit Safety Beams in those countries that so require.
23. Always ensure that the garage door is fully open and stationary before driving in or out of the garage.
24. Always ensure the garage door is fully closed and stationary before moving out of its view.
25. Adjustments to the Safety Obstruction Force settings must only be carried out by a technically qualified person. Attempting to adjust the settings without suitable technical qualification may result in severe personal injury, death and / or property and / or AGDO damage.
26. Keep hands and loose clothing clear of the AGDO and garage door at all times.
27. In order for the Safety Obstruction Force system to function it must first encounter an obstruction in the form of an object / person on to which some force **MUST** be exerted. As a result the object / person / garage door may suffer **DAMAGE AND / OR INJURY**.
28. **The Safety Obstruction System is designed to work on STATIONARY objects only. Serious personal injury, death and / or property and / or product damage may occur if the garage door comes into contact with a moving object while it is opening or closing**

Warranty Exclusions

No claims whatsoever will be recognized under the terms of the AGDO's warranty which pertain to damage, injury, cost or expense, suffered by persons and / or to property, which either directly or indirectly arise out of any one of the following occurrences;

- a. Failure to install the AGDO in accordance with the captioned instructions and safety recommendations.
- b. The garage door coming into contact with a moving object. (refer Point 28 in the above)
- c. The AGDO being used for other than a maximum 4 car residential application.
- d. Failure to install the AGDO on a properly balanced well functioning garage door. (refer Point 3 in the above)
- e. Failure to adequately lubricate the garage door counter balance springs. (refer point 6 in the above)
- f. Attempting to open or close the garage door by directly pulling on the Engage and / or Disengage Cord.
- g. Manually releasing the garage door in any position other than when it is fully closed.
- h. Failure to connect the AGDO to a properly earthed power supply.
- i. Electronic or electrical component failure due to over voltage.
- j. **Note: Light bulbs and Hand Transmitter batteries are not covered under the terms of the AGDO warranty.**

ASSEMBLY INSTRUCTIONS

1. Identifying Garage Door Type

- Identify the garage door type and then select the preferred installation type that is best suited to the application.

Installation to track-type tip up door

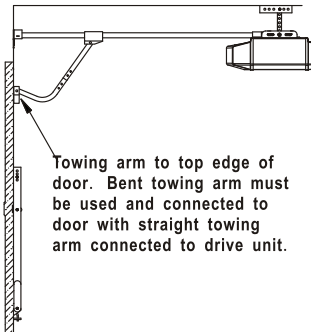


Fig 1A

Installation to jamb-type tip up door

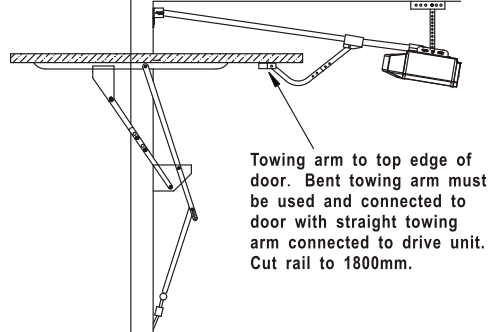


Fig 1B

Installation to sectional door

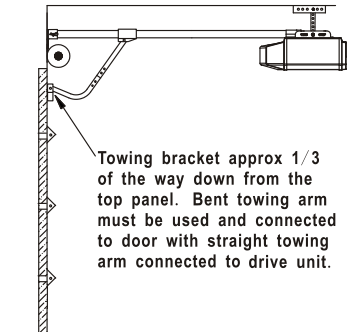


Fig 1C

2. Assembling Drive Rail and Power Head

- Refer to Figs 1A~C in order to identify Garage Door type and length of rail required.
- On a clean, smooth surface, unpack the Drive Rails, Sleeves, Terminal Bracket, Terminal Bracket Fixing Screw and Power Head and place them end to end on a clean flat surface. (Fig 2)

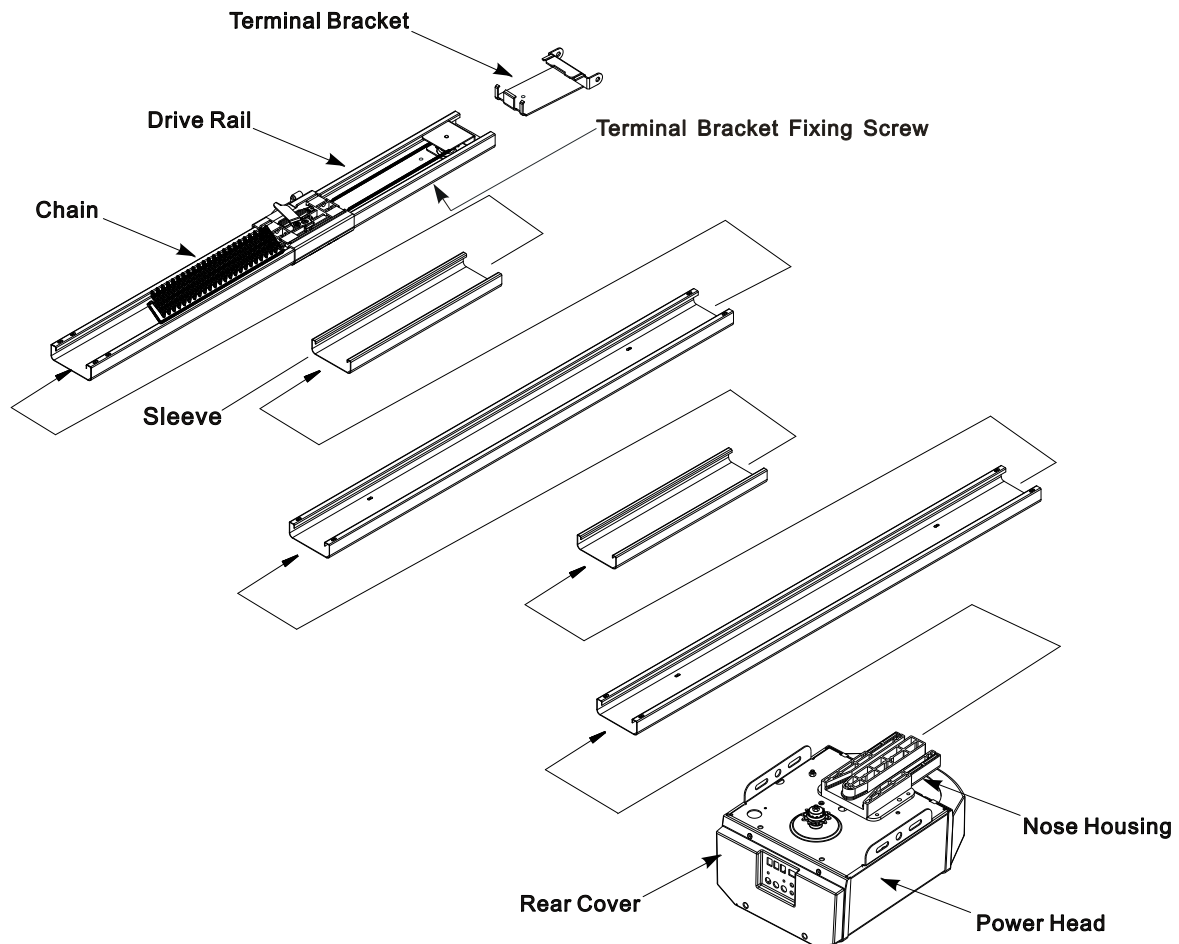


Fig 2

ASSEMBLY INSTRUCTIONS

- Insert the Terminal Bracket into the Drive Rail section labeled “towards door”.
- Affix the Terminal Bracket Fixing Screw which locks the terminal bracket to the drive rail. (Fig.2)
- Align and insert each Sleeve into a Drive Rail in accordance with the labeling stickers and push them together until the Drive Rails are fully abutted and form one Fully Assembled Rail.
- Take the Fully Assembled Rail and insert it onto the Nose Housing of the Power Head. (Fig.2)

3. Drive Chain Assembly and Tensioning

- Engage the Carriage into the Drive Chain lock piece and position the front edge of the Carriage approx 225mm from the Garage Door end of the Drive Rail. (Fig.3A)
- Locate the portion of the Drive Chain nearest to the Power Head (Fig.3A) and extend it over and around the Chain Sprocket so that it is engaged onto the teeth of the Chain Sprocket. (Fig.3B)
- At the Garage Door end of the Drive Rail ensure that the Carriage is still positioned approx 225mm away from the end of the Drive Rail.
- Insert the Chain Tensioner Bolt (Fig.3C) into the hole of the Terminal Bracket and affix the Tensioner Nut

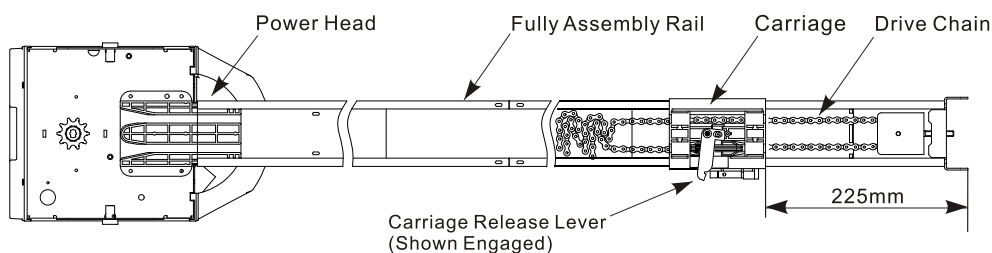


Fig 3A

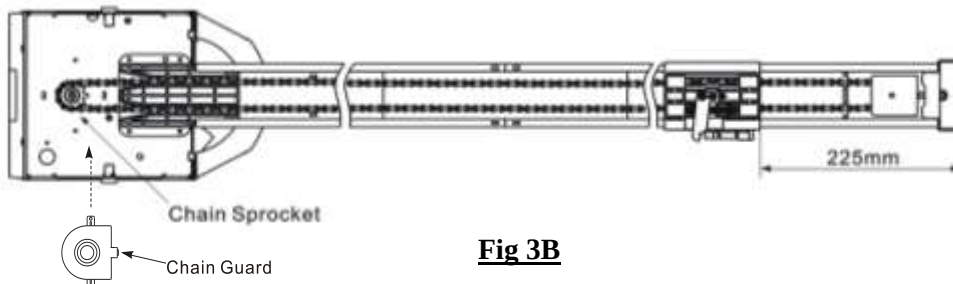


Fig 3B

- **Important Note: BEFORE tensioning the Drive Chain ensure that the teeth of the Chain Sprocket are correctly engaged into the links of the Drive Chain.**
- Tighten the Tensioner Nut (Fig.3C) until the Drive Chain has approximately 3~5mm of sag at its mid point.
- **Important Note: Ensure that the Drive Chain has not been over tightened or under tightened. Under tightening or over tightening can cause the AGDO to;**
 - i. suffer premature wear to the Chain Sprocket and/or Pulley Wheel, or
 - ii. become excessively noisy when opening or closing the garage door.
- Fit the Chain Guard to the Power Head with the 2 screws provided (Fig.3B)
- The AGDO is now fully assembled and ready for installation.

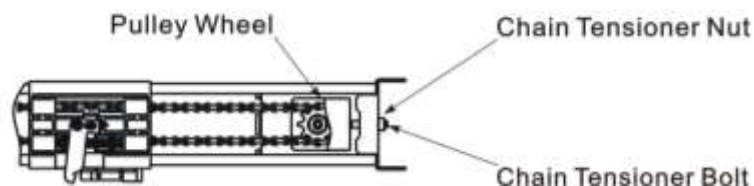


Fig 3C

INSTALLATION INSTRUCTIONS

4. Mounting Header Bracket

- Determine the highest arcing point of the garage door (Fig.4) and mark this as a horizontal line on the structural wall (header) above the top edge of the garage door. (Fig.5)
- Determine the Garage door Center Line and mark a vertical line on the Header above the top edge of the Garage door. (Fig.5)
- Centralize the **bottom edge** of the Header Bracket on the intersection of the 2 marked lines and mark the location of at least 2 of the Header Bracket screw holes (Fig.5) The 2 holes must **both** be either in the vertical or horizontal plane. (not one vertical and the other horizontal)
- Drill the 2 screw holes and use 2 screws of at least 8mm diameter to secure the Header Bracket to the header.
- **Important Note: The Header Bracket carries ALL of the opening and closing thrust of the AGDO and as such must be securely fastened to a rigid, structural member of the garage.**

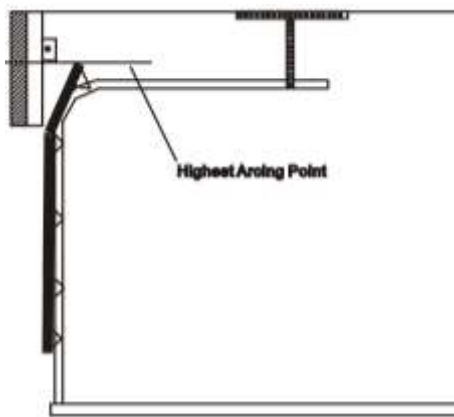


Fig 4

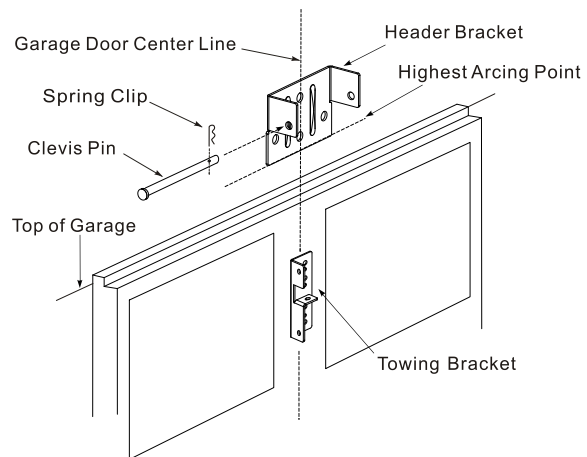


Fig 5

5. Mounting Towing Bracket

- Determine the Garage Door Center Line and affix the Towing Bracket (Fig.5) to a structural member of the garage door. Mark the location of at least 2 screw holes as far apart from each other as possible
- Drill the 2 screw holes with appropriate drill and securely mount the Towing Bracket to the garage door using screws of at least 6mm diameter.
- **Important Notes:**
 - a. It is recommended to use fixing screws and nuts rather than self drilling screws.
 - b. For Sectional Garage Doors the pivot point of the Towing Bracket, where it attaches to the Towing Arms, should be located approx 150 ~ 200mm down from the top edge of the top panel. For Tilt Doors the pivot point should be as close to the top edge of the Garage door as possible.

6. Attaching Drive Rail Assembly to Header Bracket

- Lay the assembled AGDO on the garage floor in line with the centerline of the garage door so that the Power Head (Fig.2) is furthest from the garage door.
- **Important Note: avoid scratches and potential damage to the AGDO plastic covers by placing the Power Head on cardboard or foam.**
- Lift the Drive Rail Assembly up to the Header Bracket so that the Terminal Bracket sits in between the ears of the Header Bracket. (Fig 6)
- Align the mounting holes of the Header Bracket and Terminal Bracket and fully insert the Clevis Pin.
- Secure the Clevis Pin with the Spring Pin.

INSTALLATION INSTRUCTIONS

7. Mounting Power Head to Ceiling

- Raise the Power Head off the floor and rest it on a support high enough that the Drive Rail Assembly runs parallel to the ground. (Fig.7 depicts typical sectional type garage door installation for tip up door refer Fig.1B)
- Carefully open the garage door and ensure that no part of it comes into contact with the Drive Rail Assembly or the Power Head during the entire movement of the garage door.
- Align the Drive Rail Assembly with the centerline of the garage door and securely fasten the Power Head to a structural member of the ceiling or roof using 2 lengths of vertically hung steel angle – normally 20mm x 20mm x 1mm. (Fig.7)
- Note: One length of each hangar should be fastened to each side of the AGDO chassis within the holes and slots provided and a 3rd length should be used to diagonally brace the 2 vertical pieces.
- Once mounted the Power Head and Drive Rail Assembly should sit parallel to the floor along both planes. (For Sectional and Track-Type Tilt Doors only. For Jamb-Type Tilt Door refer Fig 1B)
- **Important Notes:**
 - a. **With the garage door in the fully open position, the underside of the Drive Rail Assembly should be no more than 50mm above the highest arcing point of the garage door for its entire length. (Fig.7)**
 - b. **The antenna of the AGDO should be extended down below the main body cover.**

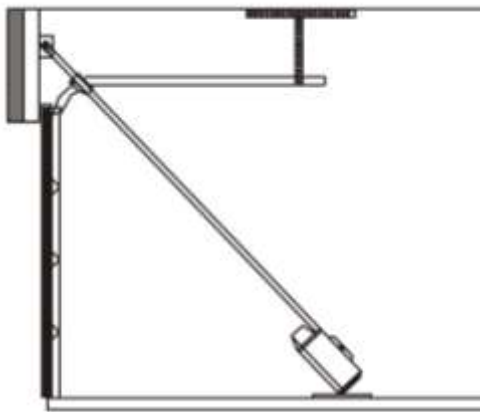


Fig 6

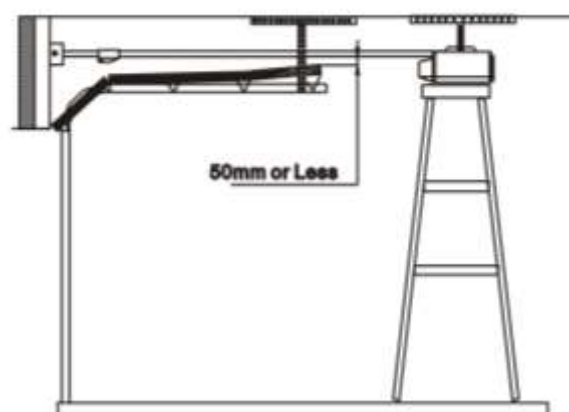


Fig 7

8. Attaching Towing Arms

- Close the garage door.
- With the Carriage **disengaged** (Fig.9) and positioned approx 225mm from the front wall, attach the Straight Towing Arm (Fig 8) to the Carriage using the short clevis pin.
- Secure the short clevis pin with the spring pin.
- Attach the Bent Towing Arm to the Towing Bracket (use the end of the arm which has only one hole) using the 8mm screw and 2 nuts. (Fig 8)
- **Important Note: The Screw should be securely locked on to the Towing Bracket with the 2 nuts and not allowed to pivot - the screw must be allowed to pivot freely within the Towing Arm only.**
- Bring the Straight and Bent Towing Arms together and align the 2 closest sets of holes.
- Securely fix the Bent and Straight Towing Arms together using 2 x 8mm screws and nuts.

INSTALLATION INSTRUCTIONS

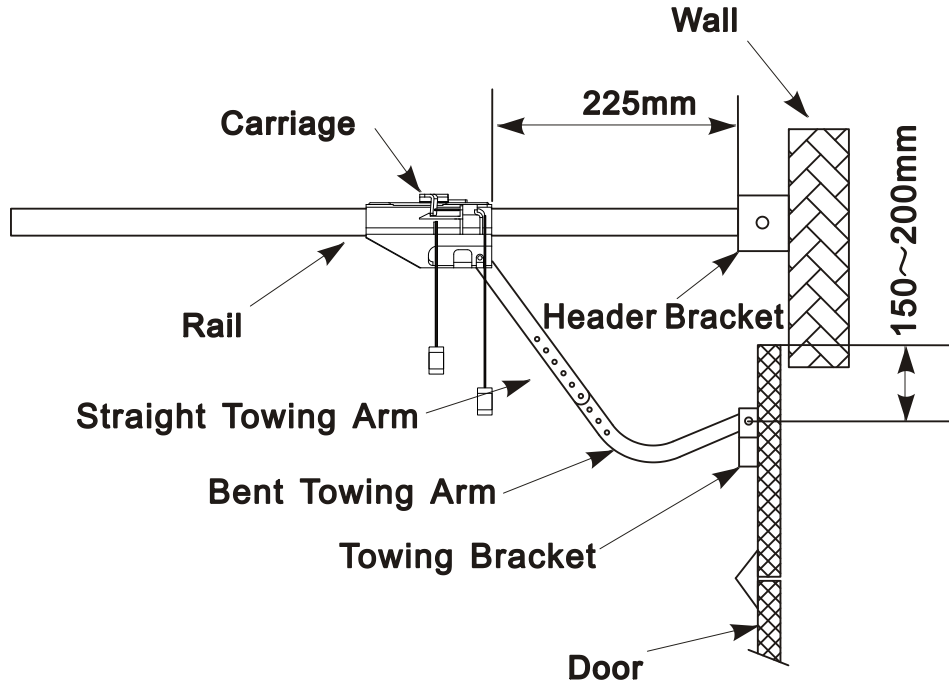


Fig 8

9. Adjusting Engage and Disengage Cords

- Unfurl the Green Engage and Red Disengage Cords and cut them to length so that their ends hang approximately 1800mm above the garage floor. (Fig.9)

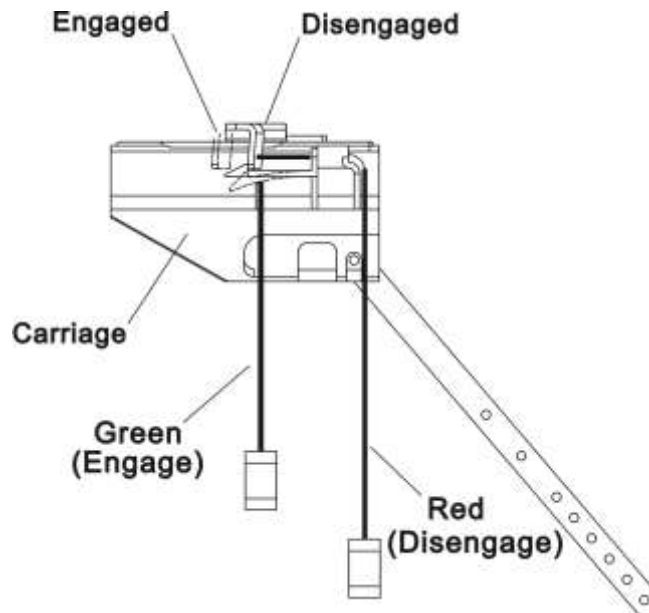


Fig 9

10. Connecting to Power Supply

- Connect the AGDO to a properly earthed power supply using the Power Cord provided.
- **Important Note: Ensure that no excess cord hangs below the AGDO when it is plugged-in.**
- Switch the power on at the power supply.

SETTINGS AND ADJUSTMENTS

11. Disengaging from Garage Door

- Pull down on the Red Coloured Disengage Cord (Fig.9) to disengage the AGDO from the Garage door.
- **Important Notes:**
 - a. **Never attempt to open/close the Garage door by pulling on the Disengage Cord. Doing so may result in SERIOUS PERSONAL INJURY, PROPERTY AND/OR AGDO DAMAGE.**
 - b. **Always disengage the AGDO with the Garage door in the fully closed position.**
 - c. **If attempting to disengage the AGDO from any position other than with the garage door fully closed ensure that there are no persons and/or property near or directly under the path of the garage door.**

12. Engaging to Garage Door

- Open the garage door by hand so that it is approx 1 meter off the ground.
- Pull down on the Green Coloured Engage Cord. (Fig 9)
- Press the Green Coloured “Run” Button located on the Rear Cover of the AGDO. (Fig.11)
- After a short time the AGDO will self-engage into the Carriage.
- **Important Note: If the AGDO runs for some time (first cycle) and then stops without engaging into the Carriage press the Green Coloured “Run” Button again and the AGDO will self-engage on the second cycle.**

13. Travel Adjustment

Close Direction Garage Door Travel Adjustment

- Locate the 2 Door Travel Adjusting Screws (DTAS) found on the underside of the Power Head. (Fig 10)
- **Increase Travel** - turn the DTAS marked with the **Red** arrow clockwise towards “MORE”.
- **Decrease Travel**-turn the DTAS marked with the **Red** arrow anti-clockwise towards “LESS”.
- **Important Notes:**
 - a. **The AGDO will switch on automatically and “follow the limits” when they are adjusted in the direction of increased travel.**
 - b. **In the fully closed position the garage door should be sitting lightly on the ground with the rubber weather seal not fully compressed. (sectional garage doors only)**
 - c. **LED Indicator (Fig 11) will glow solid once the AGDO reaches the Close Limit position.**

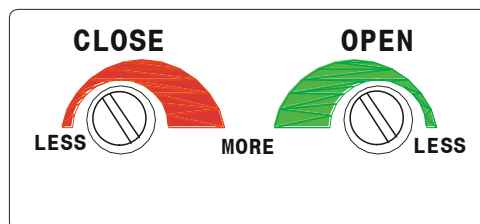


Fig 10

Open Direction Garage Door Travel Adjustment

- Locate the 2 Door Travel Adjusting Screws (DTAS) found on the underside of the Power Head. (Fig 10)
- **Increase Travel**-turn the DTAS marked with the **Green** arrow anti-clockwise towards “MORE”.
- **Decrease Travel** - turn the DTAS marked with the **Green** arrow clockwise towards “LESS”.
- **Important Notes:**
 - a. **The AGDO will switch on automatically and “follow the limits” when they are adjusted in the direction of increased travel.**
 - b. **In the fully open position the garage door should not be sitting against the door track stoppers.**

SETTINGS AND ADJUSTMENTS

- c. LED Indicator (Fig 11) will slow flash once the AGDO reaches the Open Limit position.

14. Safety Obstruction Force Adjustment

Entering Safety Obstruction Force (SOF) Adjustment Mode

- Locate the Learn button (Fig 11) found on the rear cover of the AGDO.
- Press and hold down the “Learn” button for 2 sec – LED Indicator will commence to quick flash.
- Safety Obstruction Force adjustment can be carried out while LED Indicator is quick flashing.
- To close out SOF adjustment mode momentarily press Learn button – LED Indicator will return to normal flash rate.
- Note: SOF adjustment mode will close out automatically after 4.5 mins after the AGDO receives the last signal if not closed out manually beforehand.

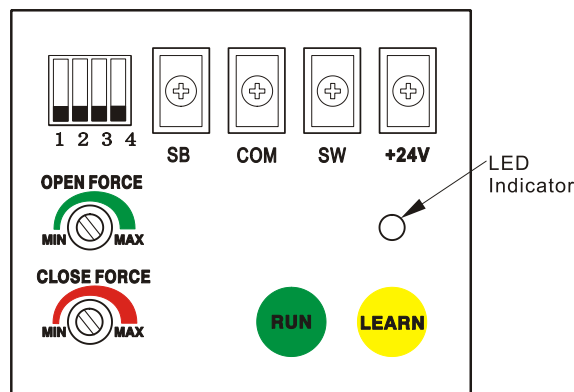


Fig 11

Safety Obstruction Force (SOF) Adjustment – Open Direction

- Ensure that the AGDO is in SOF Adjustment Mode.
- With the garage door in the **fully closed** position - press the green Run button (Fig.11) so that the garage door begins to open.
- As the garage door is opening - slowly turn the Open Force (green) adjustment pin (Fig.11) in an anti-clockwise direction until the garage door stops.
- Now turn the same pin clockwise 5 degrees.

Safety Obstruction Force (SOF) Testing – Open Direction

- With the garage door in the **fully closed** position - stand inside the garage just behind the path of the garage door close to its middle position.
- Press the green “Run” button (Fig.11) so that the garage door begins to open.
- When the garage door has opened by approx 450mm apply some firm downward pressure to one of its internal structural members.
- If the SOF setting is correct the AGDO will stop the garage door upon sensing the applied force.
- If too little or too much force is required to make the AGDO stop - turn the Open Force (green) adjustment pin 5 degrees in the appropriate direction (clockwise to increase force - anti-clockwise to decrease force) and then repeat the previous testing steps.
- Once correct SOF adjustment has been attained momentarily press the Learn button to close out SOF Adjustment Mode.

Safety Obstruction Force (SOF) Adjustment – Close Direction

- Ensure that the AGDO is in SOF adjustment mode.

SETTINGS AND ADJUSTMENTS

- With the garage door in the **fully open** position, press the Run button (Fig.11) so that the garage door begins to close.
- As the garage door is closing - slowly turn the Close Force (red) adjustment pin (Fig.11) in an anti-clockwise direction until the garage door stops and begins to reverse direction.
- Now turn the same pin clockwise 5 degrees.

Safety Obstruction Force (SOF) Testing – Close Direction

- With the garage door in the **fully open** position stand inside the garage just behind the path of the garage door close to its middle position.
- Place a 32mm thick block of wood under the line of the garage door (approx at the mid point of the garage door) so that the garage door will close onto the block of wood.
- Press the green “Run” button so that the garage door begins to close.
- If the Safety Obstruction Force Adjustment is correct the AGDO will stop and reverse the direction of the garage door upon sensing the block of wood.
- If the AGDO stops but does not reverse then turn the Close Force adjustment pin 5 degrees in an anti-clockwise direction. (Fig 11)
- Once correct SOF adjustment has been attained momentarily press the Learn button to close out SOF Adjustment Mode.
- Note: Ensure that Close Direction Travel Adjustment has been set so that bottom of the garage door is resting lightly on the floor of the garage. (refer Sec.13 for travel adjustment instructions)

15. Hand Transmitters

Code Learning

- The AGDO can store up to 14 individual Hand Transmitter codes.
- Hand Transmitters may be coded as follows;
 - i. locate one of the Hand Transmitters supplied with the AGDO
 - ii. momentarily press “Learn” button (Fig.11) – LED Indicator will glow solid
 - iii. momentarily press Hand Transmitter button – LED Indicator will extinguish
 - iv. momentarily press Hand Transmitter button again – LED Indicator will begin to medium flash - programming is completed once the LED Indicator ceases to medium flash
- To code additional Hand Transmitters repeat steps i ~ iv.
- Code Learning sequence will close out automatically after 35 sec if no Transmitter Code has been received.

Code Deleting

- All Hand Transmitter codes may be deleted as follows;
 - i. momentarily press the “Learn” button located on the side of the AGDO (Fig.12) – LED Indicator will glow solid
 - ii. momentarily press “Run” button – LED Indicator will flash rapidly – all Hand Transmitter Codes will have been deleted once the LED Indicator ceases to rapid flash

Battery Replacement

- Battery may be replaced as follows;
 - i. remove the fixing screw located under the sticker on the underside of the Hand Transmitter
 - ii. open the 2 halves of the Hand Transmitter and replace the battery with one of identical specification
 - iii. clip the 2 halves of the case back together and replace the fixing screw

OPTIONS AND FEATURES

16. Auto Close

- Auto Close can enhance the security of your property by ensuring that your garage door is never unintentionally left open.
- Auto Close will automatically close the garage door;
 - i. 3 sec after reaching the fully open position - provided that a person or object **has** passed through the Safety Beams within the Delay Time, or
 - ii. upon expiry of the user selected delay time – provided that a person or object **has not** passed through the Safety Beams within the Delay Time.
- Note: Auto Close will function only when used in conjunction with Safety Beams. (Refer Sec.23)

Enabling

- The function select Dip Switches are contained within the rear cover of the AGDO
- Select Dips 1 & 2 to the “ON” position. (Fig.11)

Delay Time Selection

- Auto Close delay time may be configured according to the following table;

Delay (sec)	Dip No. 3	Dip No. 4
15	off	off
30	on	off
45	off	on
60	on	on

17. Courtesy Lamp

- The in built Courtesy Lamp will illuminate each time the AGDO is activated and then switch off automatically 3 min after receiving the last Hand Transmitter or run signal.

Bulb Replacement

- Remove Lamp Cover by lifting at the 2 uppermost inside edges.
- Remove bulb by turning it in an anti-clockwise direction.
- Replace bulb with identical 60W (maximum) Edison Screw **rough construction**.
- **Important Note: Replacing the bulb with a model greater than 60W will cause the light cover and/or main cover to melt!**

18. Dip Switches

- The Dip Switches located within the back cover of the AGDO (Fig.11) enable or disable specific functionality.
- By reading through the section titled “Options and Features” the AGDO’s functionality can be customized to individual requirements.
- The functions of the Dip Switches are described in the following table;

Function	Dip No.	Dip Position	Reference
Safety Beams (SB) - Enable	1	ON	Sec.23
Auto Close (AC) - Enable	1 & 2	ON	Sec.23
Auto Close Delay Time	3 & 4	Varies	Sec.16

OPTIONS AND FEATURES

19. Learn Button

- The Learn button (Fig 11) is located on the rear cover of the AGDO and serves to initiate the functions as described in the following table;

Function	Action	Reference
Learn Hand Transmitter Codes	Momentary press	Sec.15
Delete Hand Transmitter Codes	Press and hold while powering-up	Sec.15
Entering SOF Adjustment Mode	Press and hold for 2 sec.	Sec.14

20. LED Indicator

- The LED Indicator (Fig 11) is located on the rear cover of the AGDO and serves to provide visual indication of functionality sequences as described in the following table;

Display	Indicator
Glow Solid	Reached door closed position
Slow Flash	Reached door open position
Medium Flash	Learning or deleting Hand Transmitter codes
Quick Flash	Force adjust mode activated
None	AGDO is traveling between open and closed positions

21. Output Terminals

- 4 Output Terminals (Fig.11) are provided within the back cover of the AGDO to support the connection of the following accessories;
 - Genuine 2 wire Safety Beams (Fig 12A)
 - 24VDC universal receiver (Fig 12B)
 - Normally open momentary contact Wall Switch (Fig 12)

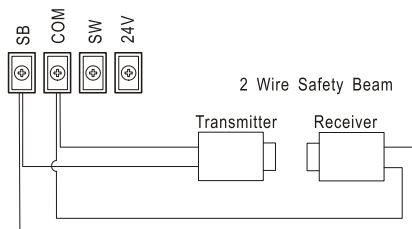


Fig 12A

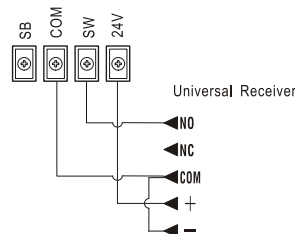


Fig 12B

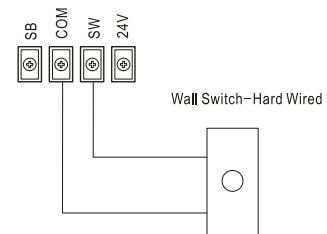


Fig 12C

22. Run Button

- The Run button (Fig.11) is located on the rear cover of the AGDO and serves to initiate the following functions;

Function	Action
Activate AGDO	Momentary press
Safety Beam override	Press and hold until garage door is fully closed

23. Safety Beams

- Genuine 2 wire Safety Beams may be connected to the AGDO.
- The installation of Safety Beams greatly enhances safety by constantly monitoring for persons or objects that might pass within the path of the moving garage door. The AGDO will commence to safety reverse if the Safety Beams become momentarily or permanently interrupted while the garage door is closing.

OPTIONS AND FEATURES

Mounting

- Locate the Safety Beam mounting brackets provided.
- Mount the bracket so that its bottom edge sits 125mm off the floor.
- Use the 2 mounting screws provided to fasten each mounting bracket to the wall.
- Use the 2 screws and nuts provided to fasten the 2 Safety Beam modules (“Emitter” and “Receiver”) to the mounting brackets so that the LED Indicator on each Safety Beam module is facing upwards.

Connection – To Beam Modules

- Use the 2 lengths of Figure 8 Cable provided.
- Strip back a 15mm length of outer insulator from each of the 4 cable ends.
- Connect the cables to the screw terminals of the Safety Beams as depicted in Fig.12A.
- Securely fix the cable up and along the wall and run one length of each cable adjacent to the output terminals of the AGDO. (Fig.11)

Connection – To AGDO

- Ensure that the AGDO is switched off.
- Strip back a 15mm length of outer insulator from each of the 4 cable ends.
- Connect the cables to the Output Terminals “SB” & “SW” located within the rear cover of the AGDO. (Figs.11 & 12A)

Alignment

- Ensure that the AGDO is switched on and that the red LED located along the top edge of the “Emitter” Safety Beam module is glowing red.
- Adjust the “Emitter” Safety Beam module (by turning the mounting bracket) so that it is aimed directly at the lens of the “Receiver” Safety Beam module. An indicator lamp located along the top edge of the “Receiver” will glow green once the correct alignment has been achieved.
- Test the Safety Beam alignment several times each time ensuring that when the Safety Beams are obstructed the green LED extinguishes and when unobstructed it glows solid.
- Firmly tighten the Safety Beam mounting bracket fixing screws.
- Installation of the Safety Beams is now complete.

Enabling

- The function select Dip Switches are contained within the rear cover of the AGDO
- Select Dip 1 to the “ON” position.

Testing

- As the garage door is closing pass an object through the line of the Safety Beams. If the Safety Beams are functioning correctly the AGDO should stop and then immediately reverse direction.
- If the garage door commences a close cycle but within 1 second stops and reverses, check that the Safety Beams are aligned correctly.

Override

- In the event of Safety Beam malfunction the garage door can be closed by pressing and holding the “Run” button (Fig.11) until such time as the garage door is fully closed and has stopped.
- Note: If “Run” button is released prior to the garage door reaching the fully closed position the AGDO will stop and then reverse direction.

OPTIONS AND FEATURES

24. Thermal Overload

- In order to prevent overheating damage the AGDO is equipped with an internal thermal overload switch. In the event of continuous usage the AGDO may overheat and shut down. After a shut down the thermal overload switch will automatically reset after a 20 ~ 30 minute cooling period.

25. Wall Switch – Hard Wired

- A permanently wired Wall Switch may be connected to the AGDO in a convenient location such as adjacent to a side entry door into the garage.
- Use a normally open momentary contact type switch. (similar to spring loaded door bell type switch)
- Connect the Wall Switch to the Output Terminals depicted in Fig.12C.
- **Important Note: The Wall Switch must be mounted within sight of the garage door and a reasonable distance away from moving parts. It should be mounted at least 1500mm above the ground and the Entrapment Warning Label provided must be attached adjacent to and within clear sight of it.**

26. Wall Switch – Wireless

- The wireless wall switch provides ease of installation without the need for running hard wires to the switch and can be mounted in a convenient location such as adjacent to a side entry door into the garage.
- The Wireless Wall Switch may be learned into the AGDO as per the procedure outlined in Sec.15 (Hand Transmitter Code Learning)
- The switch can be permanently screwed to the wall through the mounting holes provided or alternatively “hooked” on the wall providing the convenience of easy demount ability.
- Use the mounting template and mounting instructions provided with the switch.
- **Important Note: The wireless Wall Switch must be mounted within sight of the garage door and a reasonable distance away from moving parts. It should be mounted at least 1500mm above the ground and the Entrapment Warning Label provided must be attached adjacent to and within clear sight of it.**

TECHNICAL SPECIFICATIONS

INPUT VOLTAGE:	230 ~ 240VAC 50Hz
MAX DOOR HEIGHT:	3600mm using 4200mm rail
MAX DOOR WIDTH:	6500mm
MAX DOOR AREA:	15 Square Meters
MAX LIFTING CAPACITY:	Electronically Limited to 400N
MAX No. OF CYCLES TO THERMAL CUT OUT:	Approx 10
MOTOR TYPE:	½ HP AC 4 Pole Induction
SAFETY OBSTRUCTION FORCE SYSTEM:	Manually Adjustable Trim Pot
DOOR TRAVEL ADJUSTMENT:	Manually Adjustable Micro Switch
RECEIVER CODE STORAGE CAPACITY:	13 Individual Transmitters
TRANSMITTER FREQUENCY:	433.92 MHz Hopping Code
LIGHT GLOBE:	60Watt Edison screw rough construction
DOOR TRAVEL SPEED:	125mm/second
AUTO CLOSE:	Dip Switch Selectable
PHOTO BEAMS:	Optional

Specifications are subject to change without prior notice.

TROUBLE SHOOTING GUIDE

Symptom	Suggested Remedies	Reference	
		Page	Item
• AGDO will not function at all	• Check that AGDO is connected to power supply • Check power point function by plugging-in an alternate appliance • Check that AGDO is engaged to door	~ ~ 11	~ ~ 13
• Door stops before reaching fully open position	• Disengage AGDO from door and check for obstructions • Disengage AGDO from door and check for correct spring balance • Check for correct Safety Obstruction Force settings (open direction) • Check for correct open direction travel adjustment	11 4 12 11	12 3 15 14
• Door stops & reverses before reaching fully closed position	• Disengage AGDO from door and check for obstructions • Disengage AGDO from door and check for correct spring balance • Check for correct Safety Obstruction Force settings (close direction) • Check for correct Safety Beam alignment	11 4 12 15	12 3 15 24
• Door stops before reaching fully closed position	• Check for correct close direction travel adjustment	11	14
• Door will not Safety Reverse	• Contact serviceman	~	~
• Door requires excessive force to Safety Reverse	• Check for correct Safety Obstruction Force settings (close direction)	12	15
• Door requires excessive force to Safety Stop	• Check for correct Safety Obstruction Force settings (open direction)	12	15
• AGDO will not function from Hand Transmitter	• Check function of AGDO by operating from "Run" button • Check function of AGDO by learning-in a substitute Hand Transmitter • Re learn Hand Transmitter code into AGDO • Replace Hand Transmitter battery	15 13 13 13	23 16 16 16
• Hand Transmitter operating range is poor	• Replace Hand Transmitter battery • Extended AGDO antenna	13 ~	16 ~
• Courtesy Lamp will not function	• Replace Courtesy Lamp bulb	14	18
• Cannot adjust Safety Obstruction Force settings	• Ensure that Safety Obstruction Force Adjustment Mode has been entered	12	15
• LED Indicator glows solid	• AGDO has reached fully closed position	15	21
• LED Indicator slow flashes	• AGDO has reached fully open position	15	21
• LED Indicator has extinguished	• AGDO is traveling between limits	15	21
• Door will not Auto Close	• Check for Safety Beam damage • Check for correct Safety Beam alignment • Check that Dip 1 & 2 have been selected to the "ON" position • Check that connecting wires have not come loose from Safety Beams • Check that connecting wires have not come loose AGDO terminals	~ 15 14 15 15	~ 24 17 24 24
• Will not Safety Reverse when Safety Beams are interrupted	• Check that Dip 1 has been selected to the "ON" position	15	24
• Door is noisy	• Lubricate door springs with automotive wheel bearing grease • Lubricate pivot point of door hinges with WD40	~	~
• AGDO is noisy	• Check for loose Courtesy Lamp cover is not loose • Check that main cover is not loose • Check that chain is correctly tensioned	~ ~ 7	~ ~ 4

NOTES